


SUPERMACH UTV800 Frame Parts Catalog

FIG.01

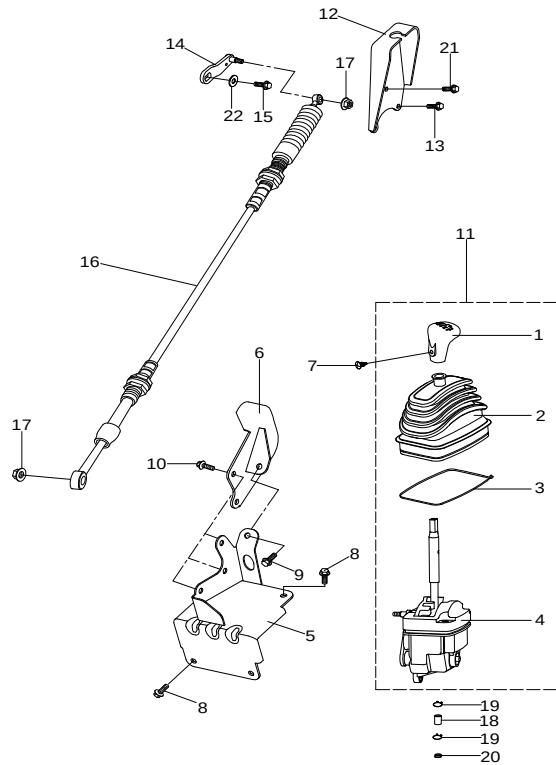

01. Shift Operating System

S/N	Parts Number	Part Name And Standard	Q'ty
1	316800001	Gearshift Knob	1
2	335800002	Gearshift Boot	1
3	340800007	Rubber Cover Clamp	1
4	316800002	Gearshift Box	1
5	316800003	Gearshift Mounting Pad	1
6	316800004	Front Bracket, Gearshift Cable	1
7	901000050	Plastic Screw	1
8	901000044	Hex Flange Bolt M8×16	4
9	901000045	Hex Flange Bolt M8×20	1
10	901000046	Hex Flange Bolt M8×12	3
11	316800006	Gearshift Comp	1
12	316800005	Rear Bracket, Gearshift Cable	1
13	901000047	Hex Flange Bolt M6×25	2
14	316800007	Gearshift Rocker Comp.	1
15	901000048	Hex Flange Bolt M6×20	1
16	316800008	Gearshift Cable Comp	1
17	901000049	Hex Flange Self-locked Nut M6	2
18	339800014	Draining Tube	1
19	340800008	Clipφ15	2
20	334800002	Plug, Draining Tube	1
21	901000051	Hex Flange Bolt M610×1.25×35	1
22	341800025	Washer φ6	1


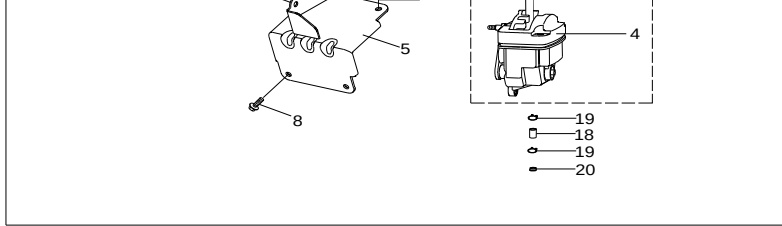


FIG.02

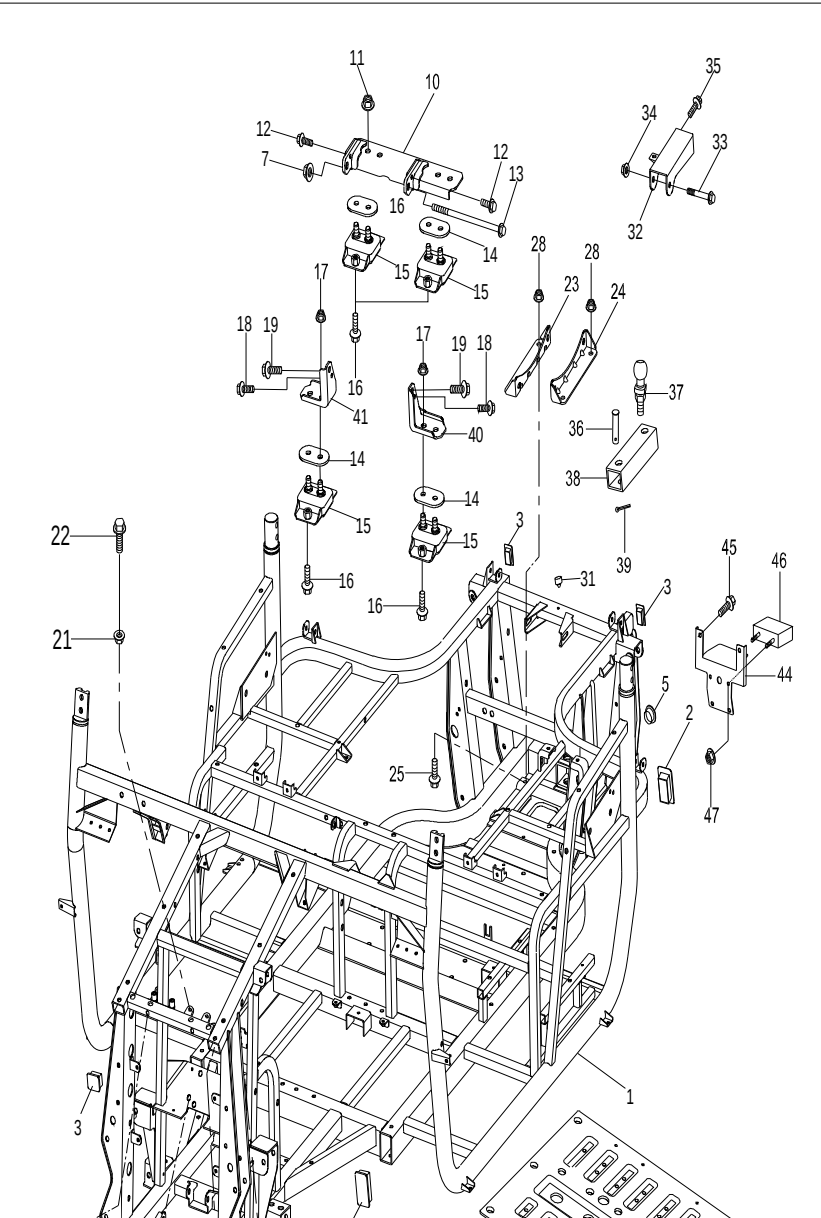

02. Frame			
S/N	Parts Number	Part Name And Standard	Q'ty
1	344800001	Frame Joint Parts	1
2	334800003	Plastic Plug, RectangularTube60×40	4
3	334800004	Plastic Plug, RectangularTube40×25	4
4	334800005	Plastic Plug, RectangularTube40×40	2
5	335800003	Rubber Plug, Rear Swing Arm Catch	4
6	341800026	Wasshorφ6	4
7	901000052	Hex Flange Self-locked Nut M10×1.25	1
8	901000053	Hex Flange Bolt M6×16	1
9	901000049	Hex Flange Self-locked Nut M6	2
10	345800001	Rear-lower Mounting Pad, Engine	1
11	901000052	Hex Flange Self-locked Nut M10×1.25	4
12	901000048	Hex Flange Bolt M6×20	2
13	901000055	Hex Flange Bolt M10×1.25×175	1
14	345800002	Mounting Washer, Engine	4
15	345800003	Shock Absorber Mounting Pad, Engine	4
16	901000056	Hex Flange Bolt M10×1.25×20	8
17	901000052	Hex Flange Self-locked Nut M10×1.25	4
18	901000048	Hex Flange Bolt M6×20	2
19	901000045	Hex Flange Bolt M8×20	2
20	901000052	Hex Flange Self-locked Nut M10×1.25	4
21	901000049	Hex Flange Self-locked Nut M6	2
22	901000057	Hex Flange Bolt M6×16	2
23	303800039	Lower Junction Panel, Right Mounting Pad, Rear Bridge	1
24	303800040	Lower Junction Panel, Left Mounting Pad, Rear Bridge	1


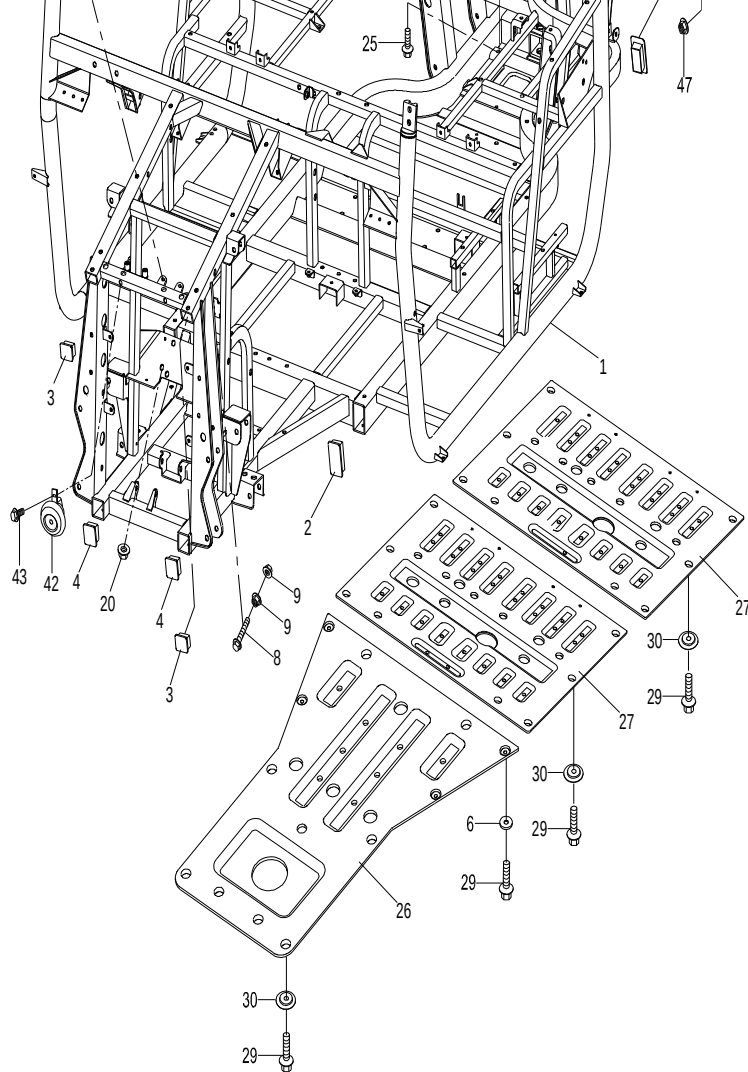



FIG.03

25	901000056	Hex Flange Bolt M10×1.25×20	4
26	303800003	Front Bottom Protective Plate	1
27	303800004	Central Bottom Protective Plate	2
28	901000052	Hex Flange Self-locked Nut M10×1.25	4
29	901000057	Hex Flange Bolt M6×16	26
30	341800027	Washer	22
31	335800004	Pin Rubber Cushion φ10×φ24×8, Muffler	1
32	303800005	Rear-upper Suspension mounting plate, Engine	1
33	901000054	Hex flange bolt M8×40	1
34	901000052	Hex Flange Self-locked Nut M10×1.25	1
35	901000058	Hex Flange Bolt M8×50	2
36	343800021	Pin, Hitch	1
37	343800011	Hitch Bar	1
38	343800013	Shaft of Hitch Bar	1
39	343800010	R shaped Pin	1
40	345800004	Front Lower Left Mounting Lug,Engine	1
41	345800005	Front Lower Right Mounting Lug,Engine	1
42	901000059	Hex Flange Self-locked Nut M5	2
43	901000150	Hex Flange Bolt M6×35	4


03. Front Board

S/N	Parts Number	Part Name And Standard	Q'ty
1	303800106	Front Panel (Red)	1

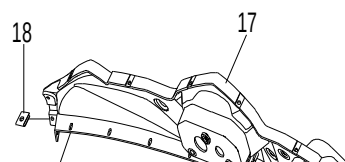

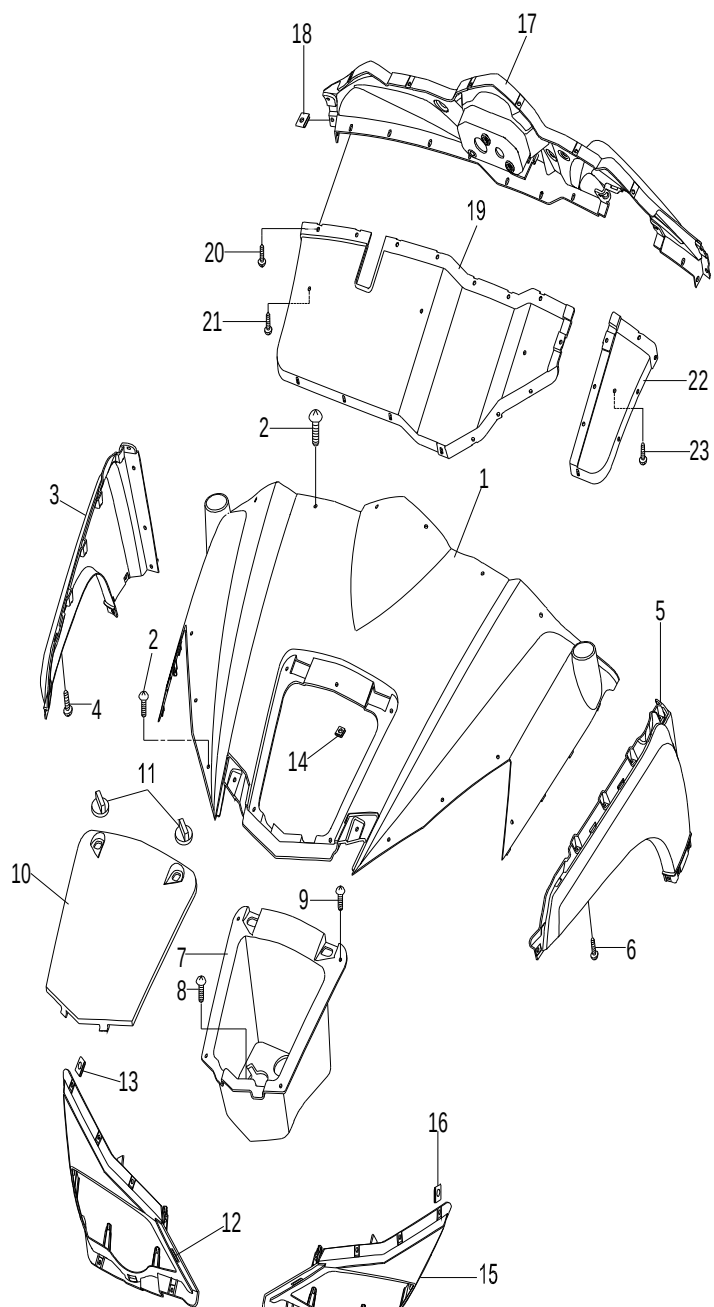


	303800206	Front Panel (Black)	1
	303800306	Front Panel (Dark Green)	1
	303800406	Front Panel (Dark Green Camouflage)	1
	303800506	Front Panel (Maple Leaf Camouflage)	1
	303800606	Front Panel (Silver)	1
	303800706	Front Panel (Vista Camouflage)	1
	303800906	Front Panel (Blue)	1
2	901000060	Screw M6×20	10
3	303800107	Right Sideband, Front Panel (Red)	1
	303800207	Right Sideband, Front Panel (Black)	1
	303800307	Right Sideband, Front Panel (Dark Green)	1
	303800407	Right Sideband, Front Panel (Dark Green Camouflage)	1
	303800507	Right Sideband, Front Panel (Maple Leaf Camouflage)	1
	303800607	Right Sideband, Front Panel (Silver)	1
	303800707	Right Sideband, Front Panel (Vista Camouflage)	1
	303800907	Right Sideband, Front Panel (Blue)	1
4	901000061	Tapping Screw ST5.2×16	4
5	303800108	Left Sideband, Front Panel (Red)	1
	303800208	Left Sideband, Front Panel (Black)	1
	303800308	Left Sideband, Front Panel (Dark Green)	1
	303800408	Left Sideband, Front Panel (Dark Green Camouflage)	1
	303800508	Left Sideband, Front Panel (Maple Leaf Camouflage)	1
	303800608	Left Sideband, Front Panel (Silver)	1
	303800708	Left Sideband, Front Panel (Vista Camouflage)	1
	303800908	Left Sideband, Front Panel (Bleu)	1
6	901000061	Tapping Screw ST5.2×16	4
7	349800001	Sundry Box	1
8	901000060	Screw M6×20	2
9	901000062	Bolt M5×20	4
10	303800109	Sundry Box Cover (Red)	1

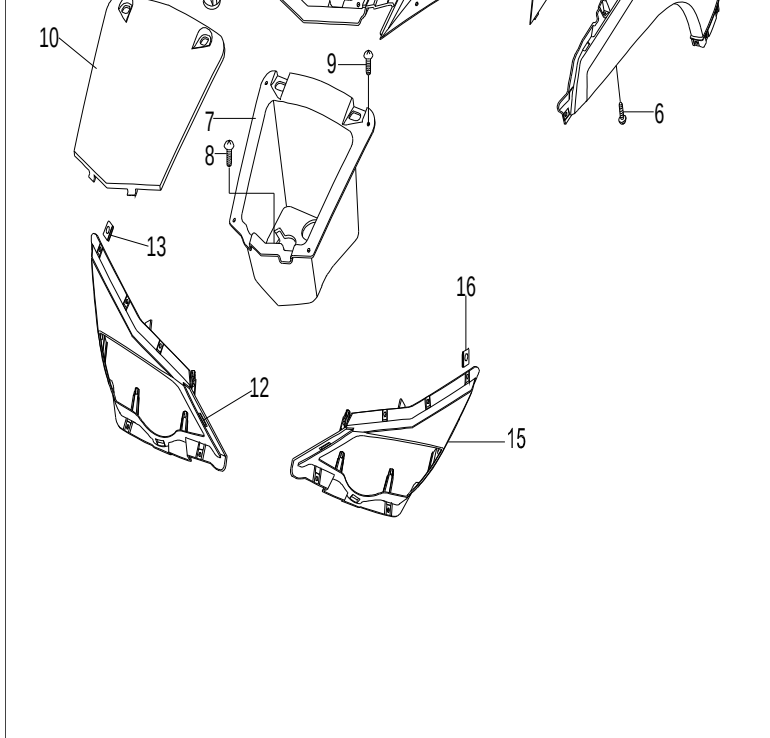

	303800209	Sundry Box Cover (Black)	1
	303800309	Sundry Box Cover (Dark Green)	1
	303800409	Sundry Box Cover (Dark Green Camouflage)	1
	303800509	Sundry Box Cover (Maple Leaf Camouflage)	1
	303800609	Sundry Box Cover (Silver)	1
	303800709	Sundry Box Cover (Vista Camouflage)	1
	303800909	Sundry Box Cover (Blue)	
11	350800001	Sundry Box Cover Locking Button	2
12	304800001	Front Headlight Right Cover	1
13	901000063	Whorl Clip M6III (15×23)	6
14	901000063	Whorl Clip M6III (15×23)	5
15	304800002	Front Headlight Left Cover	1
16	901000063	Nut Clip M6III (15×23)	6
17	303800045	Dash Board	1
18	901000063	Nut Clip M6III (15×23)	10
19	303800010	Front Upper Fender	1
20	901000060	Screw M6×20	4
21	901000060	Screw M6×20	3
22	303800011	Junction Panel, Front Upper Fender	1
23	901000060	Screw M6×20	1

FIG.04

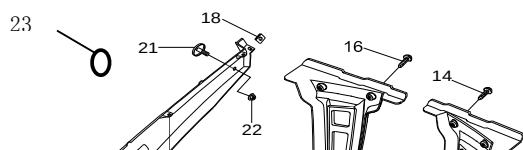

04、Side cover

S/N	Parts Number	Part Name And Standard	Q'ty
1	303800012	Front Side Cover, Left	1
2	901000060	Screw M6×20	1
3	303800013	Front Side Cover, Right	1
4	901000060	Screw M6×20	1
5	303800014	Rear Side Cover, Left	1


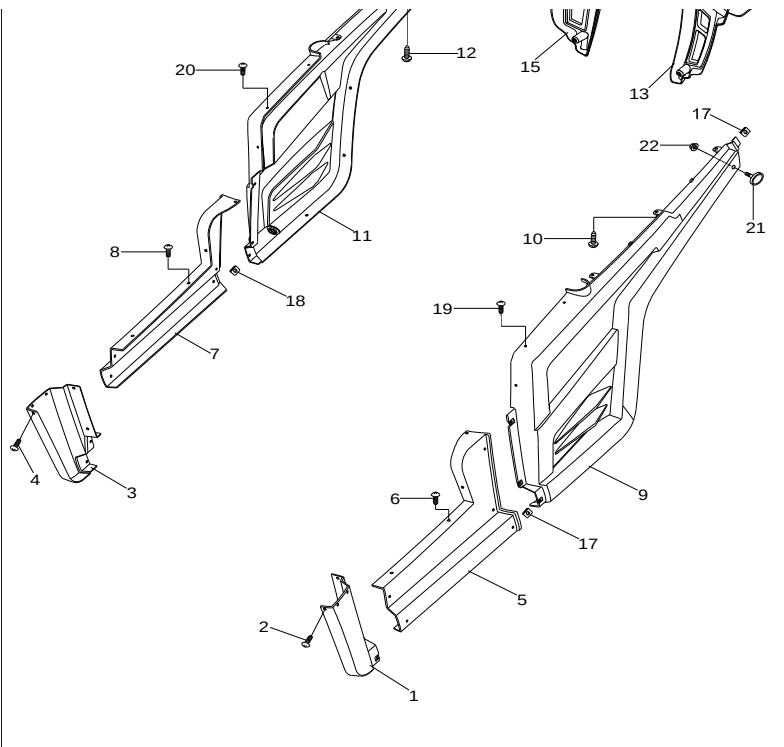


FIG.05

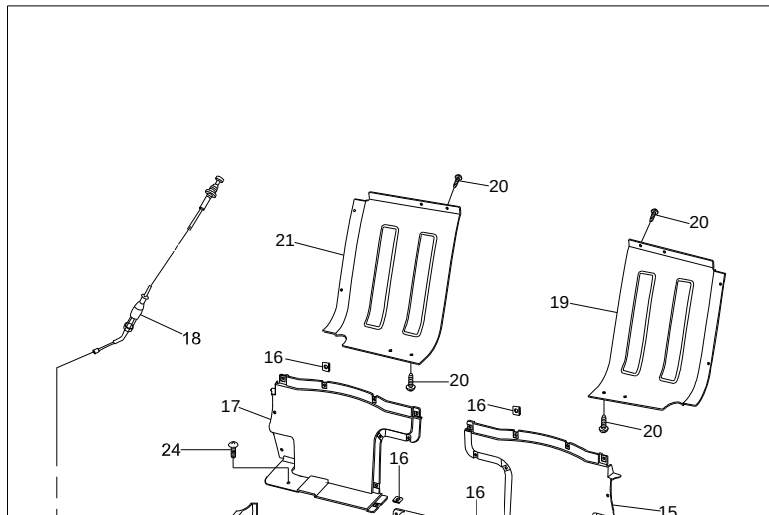

6	901000060	Screw M6×20	5
7	303800015	Rear Side Cover, Right	1
8	901000060	Screw M6×20	5
9	303800016	Left Protective Plate, Rear Frame Body	1
10	901000060	Screw M6×20	5
11	303800017	Right Protective Plate, Rear Frame Body	1
12	901000060	Screw M6×16	5
13	303800018	Rear Left Protective Plate	1
14	901000060	Screw M6×16	3
15	303800019	Rear Right Protective Plate	1
16	901000060	Screw M6×16	3
17	901000063	Nut Clip M6III (15×23)	4
18	901000063	Nut Clip M6III (15×23)	4
19	901000060	Screw M6×20	2
20	901000060	Screw M6×20	2
21	901000060	Screw M6×20	2
22	901000049	Hex Flange self-locked Nut M6	2
23	372800001	Rear & Side reflector (Circular)	2

05. Side cover parts

S/N	Parts Number	Part Name And Standard	Q'ty
1	303800020	Left Seat Protective Plate	1
2	901000060	Screw M6×16	1
3	901000063	Nut Clip M6III (15×23)	6
4	303800021	Right Seat Protective Plate	1
5	901000060	Screw M6×16	1
6	601000063	Nut Clip M6III (15×23)	6


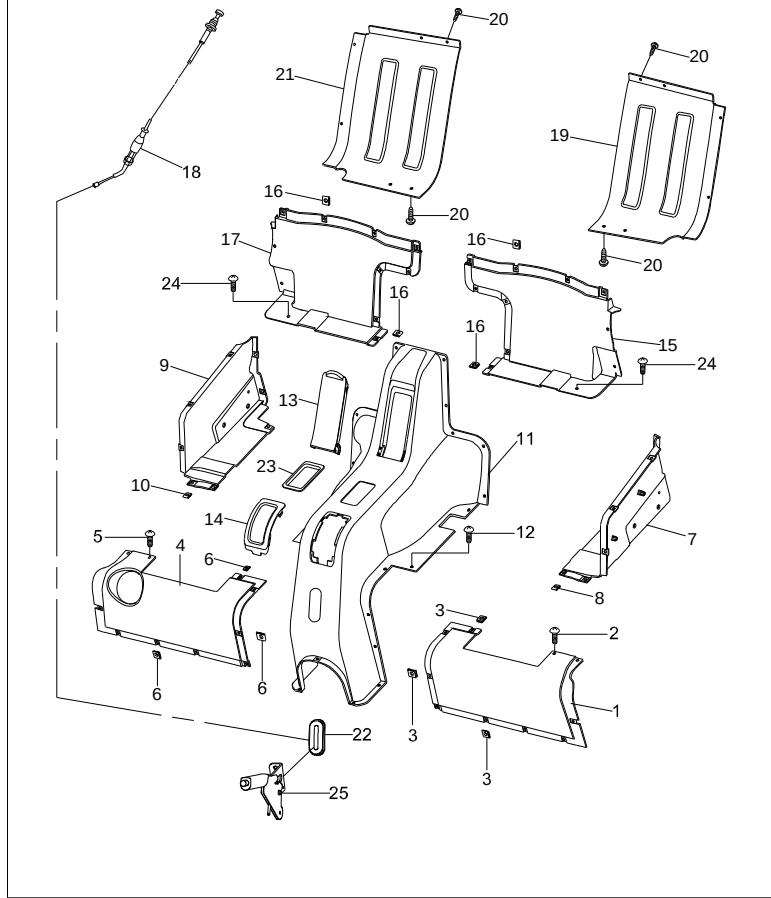



FIG.06

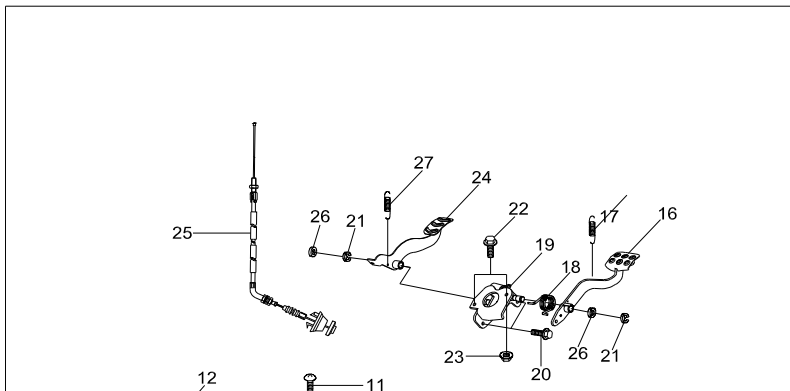

7	303800022	Left Inner Cover Board	1
8	901000063	Nut Clip M6III (15×23)	4
9	303800023	Right Inner Cover Board	1
10	901000063	Nut Clip M6III (15×23)	4
11	303800024	Central Hood	1
12	901000060	Screw M6×16	12
13	349800003	Small Case Cover	1
14	303800025	Gearshift Lever Rim	1
15	303800026	Rear Left Seat Protective Plate	1
16	901000063	Nut clip M6III (15×23)	8
17	303800027	Rear right Seat protective plate	1
18	352800001	Parking Cable	1
19	303800028	Rear Left Fender	1
20	901000060	Screw M6×16	8
21	303800029	Rear Right Fender	1
22	335800005	Rubber, Parking System	1
23	350800002	Hood Repairing Cover	1
24	901000060	Screw M6×16	4
25	351800001	Parking Assy	1


06. Footrest

S/N	Parts Number	Part Name And Standard	Q'ty
1	303800030	Left Front Fender	1
2	901000060	Screw M6×16	3
3	901000063	Nut Clip M6III (15×23)	7

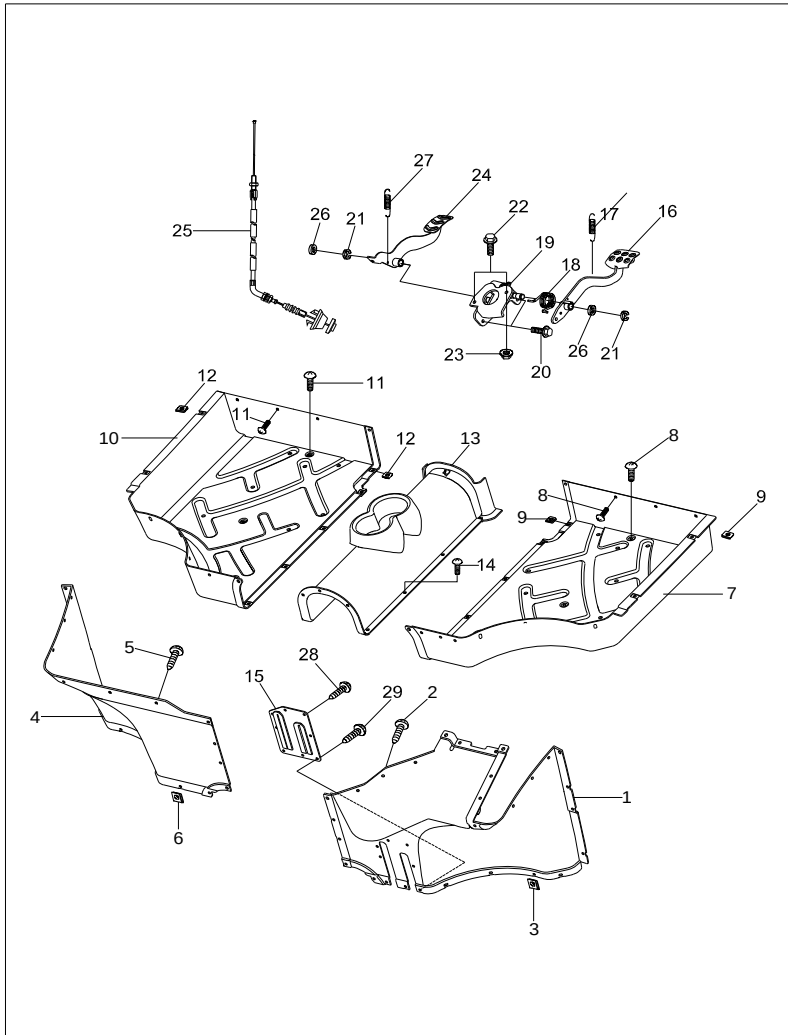

4	303800031	Right Front Fender	1
5	901000060	Screw M6×16	6
6	901000063	Nut Clip M6III (15×23)	5
7	303800032	Left Footrest	1
8	901000060	Screw M6×16	8
9	901000063	Nut Clip M6III (15×23)	2
10	303800033	Right Footrest	1
11	901000060	Screw M6×16	9
12	901000063	Nut Clip M6III (15×23)	2
13	303800034	Central Protective Plate	1
14	901000060	Screw M6×16	5
15	335800006	Brake Pedal Rubber	1
16	307800011	Rear Brake Pedal Assy	1
17	318800008	Drawspring-Rear brake switch	1
18	318800009	Brake Pedal Return Spring	1
19	317800002	Rear Brake Cylinder Bracket	1
20	901000045	Hex Flange Bolt M8×20	2
21	341800046	Circlip φ12	2
22	901000047	Hex Flange Bolt M8×25	2
23	901000064	Hex Flange Self-locked Nut M8	1
24	307800012	Accelerator Pedal Assy	1
25	352800002	Accelerator Cable Assy	1
26	341800028	Washer φ15.5×φ27×2	2
27	318800010	Return Spring, Accelerator Pedal	1
28	901000060	Screw M6×16	4
29	901000065	Screw	4
30	343800025	Rear Brake Pedal Pin	1
31	377800005	Junction Fork,Rear Disc Brake	1
32	308800015	Pin Shaft	1
33	343800026	Pin 2.5×35	1

FIG.07

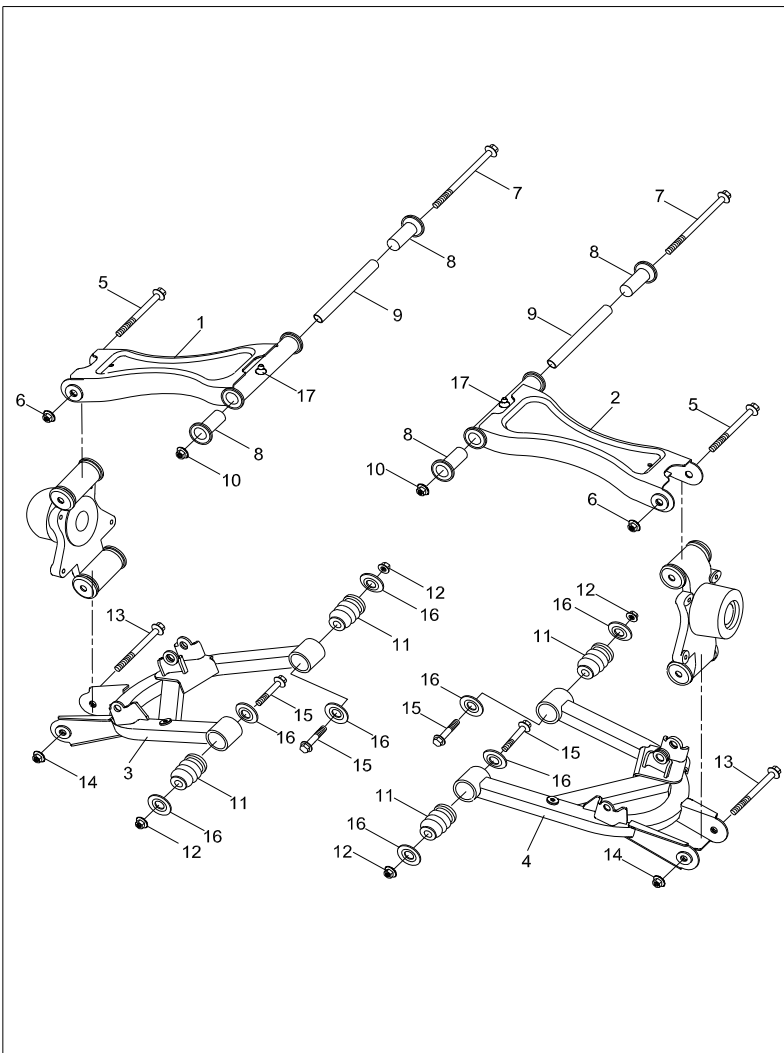

34	339800038	Inlet Pipe, Clutch	1
35	901000164	Hex Flange Bolt M6×55	2

07. Rear swing arm assy

S/N	Parts Number	Part Name And Standard	Q'ty
1	353800001	Rear Right Upper Rocker	1
2	353800002	Rear Left Upper Rocker	1
3	353800003	Rear Right Lower Rocker	1
4	353800004	Rear Left Lower Rocker	1
5	901000066	Hex Flange Bolt M10×1.25×102	2
6	901000052	Hex Flange Self-locked Nut M10×1.25	2
7	901000067	Hex Flange Bolt M10×1.25×195	2
8	332800008	Nylon Cover, Upper Rocker	4
9	332800009	Tube Insert ,Upper Rocker	2
10	901000052	Hex Flange Self-locked Nut M10×1.25	2
11	335800007	Middle Rubber Tube, Rocker	4
12	901000052	Hex Flange Self-locked Nut M10×1.25	4
13	901000066	Hex Flange Bolt M10×1.25×102	2
14	901000052	Hex Flange Self-locked Nut M10×1.25	2
15	901000054	Hex Flange Bolt M10×1.25×70	4
16	341800029	Washer,Rocker	8
17	339800015	Curved Nozzle Tip M6	2
18	303800043	Protective Plate, Rear Right Lower Rocker	1
19	303800044	Protective Plate, Rear Left Lower Rocker	1


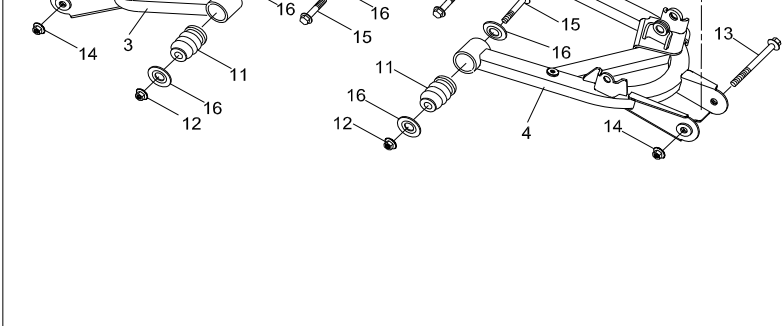


FIG.08

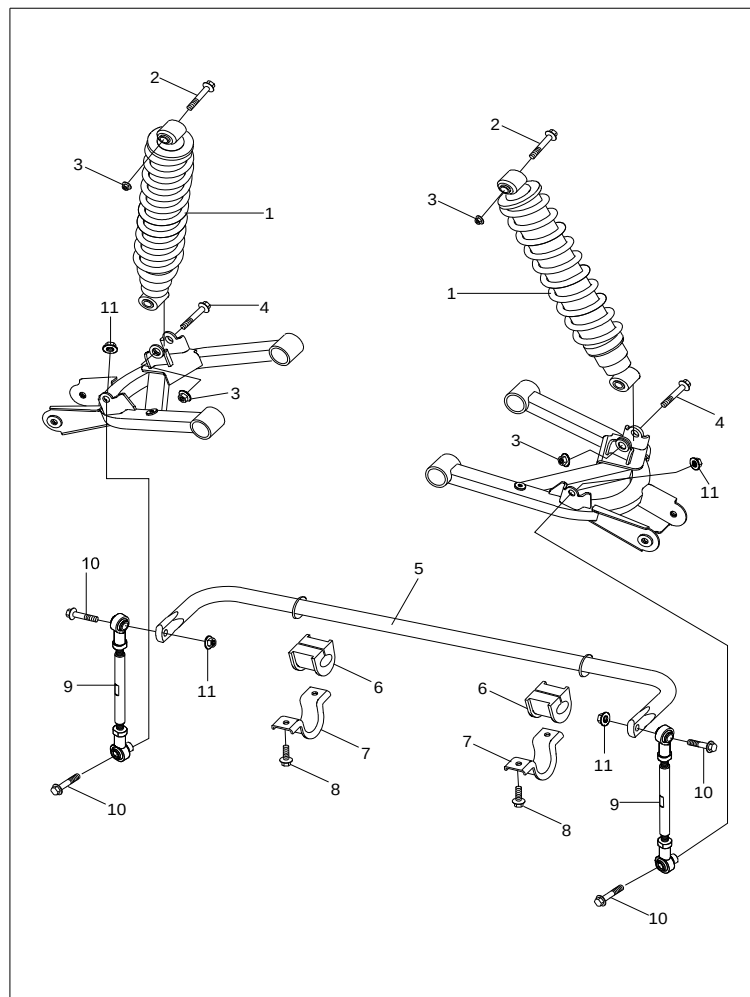

08. Rear suspension

S/N	Parts Number	Part Name And Standard	Q'ty
1	354800201	Shock Absorber (Black)	2
2	901000054	Hex Flange Bolt M12×1.25×70	2
3	901000068	Hex Flange Self-locked Nut M12×1.25	4
4	901000069	Hex Flange Bolt M12×1.25×65	2
5	355800001	Rear Balancing Pole Assy	1
6	335800008	Rubber, Balancing Pole	2
7	307800013	Press Board, Balancing Pole	2
8	901000044	Hex Flange Bolt M8×16	4
9	355800002	Tension rod, Balancing Pole	2
10	901000070	Hex Flange Bolt M10×1.25×45	4
11	901000052	Hex Flange Self-locked Nut M10×1.25	4


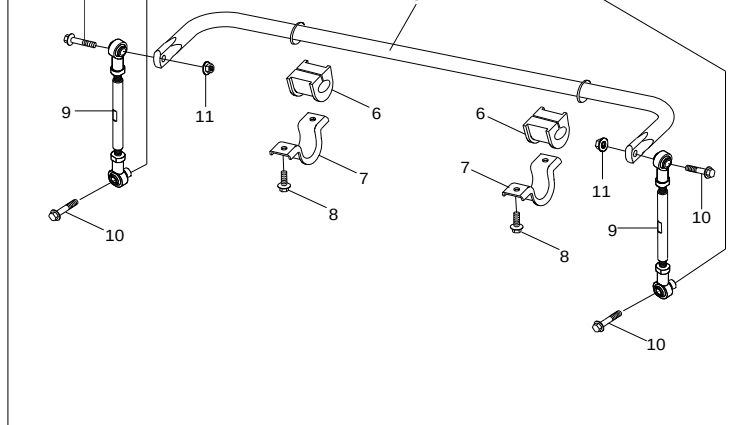


FIG.09

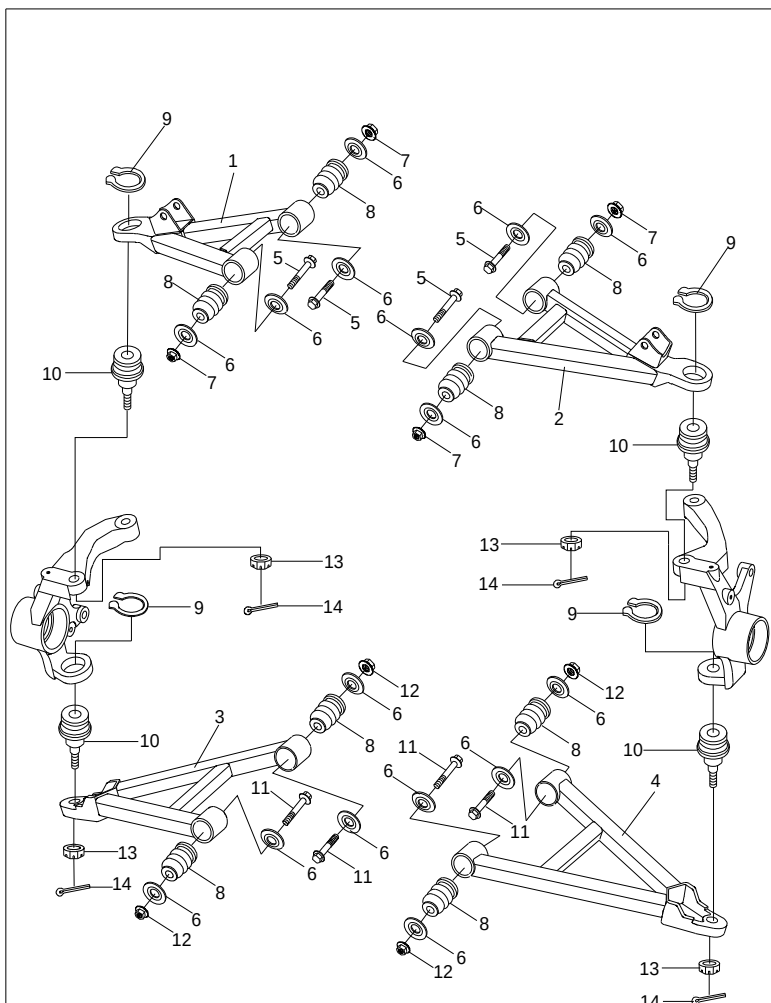

09. Front swing arm assy

S/N	Parts Number	Part Name And Standard	Q'ty
1	353800005	Front Upper Right Rocker	1
2	353800006	Front Upper Left Rocker	1
3	353800007	Front Lower Right Rocker	1
4	353800008	Front Lower Left Rocker	1
5	901000054	Hex Flange Bolt M10×1.25×70	4
6	341800029	Washer, Rocker	16
7	901000052	Hex Flange Self-locked Nut M10×1.25	4
8	335800007	Middle Rubber Tube, Rocker	8
9	341800030	Circlip D=30	4
10	353800009	Front Ball Joint Assy	4
11	901000054	Hex Flange Bolt M10×1.25×70	4
12	901000052	Hex Flange Self-locked Nut M10×1.25	4
13	901000071	Hex Flange Nut M10×1.25	4
14	343800009	Pin 3.2×20	4
15	304800025	Protective Board, Left Front Swing Arm	1
16	341800048	Circlip φ12	2
17	304800026	Protective Board,Right Front Swing Arm	1

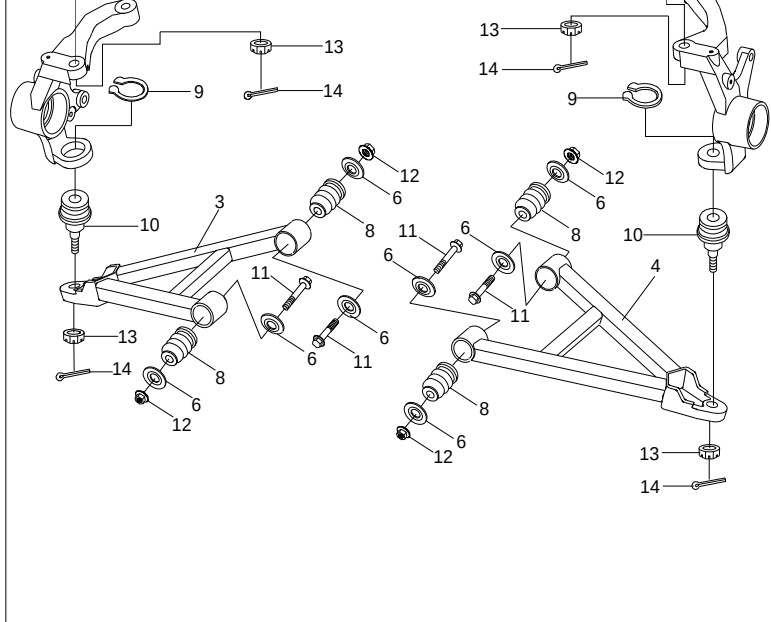
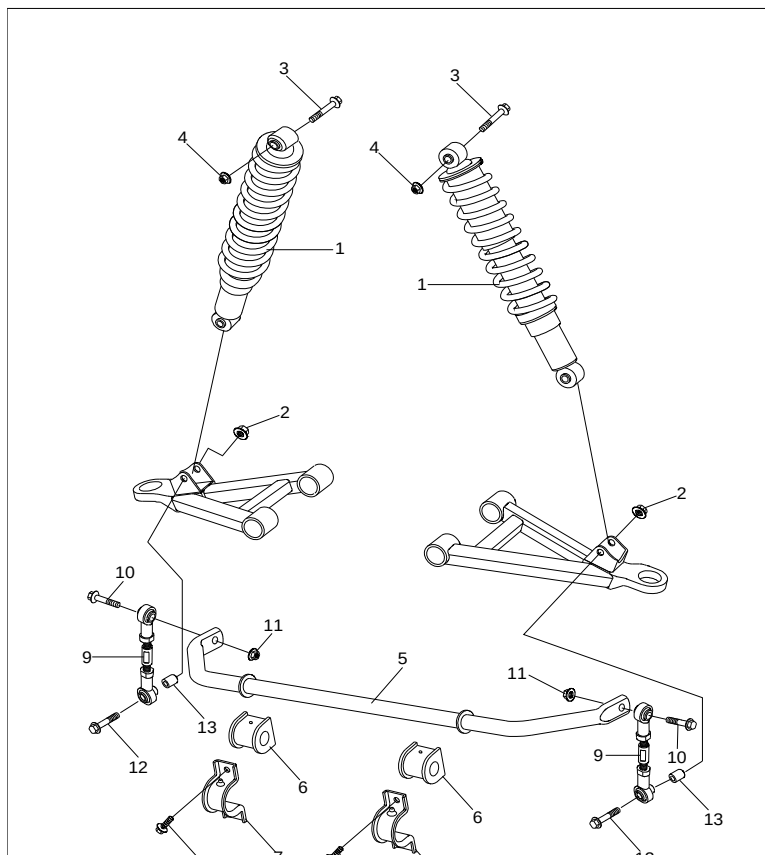


FIG.10

[illegible]

10. Front suspension

S/N	Parts Number	Part Name And Standard	Q'ty
1	354800202	Shock Absorber (Black)	2
2	901000052	Hex Flange Self-locked Nut M10×1.25	2
3	901000072	Hex Flange Bolt M10×1.25×55	2
4	901000052	Hex Flange Self-locked Nut M10×1.25	2
5	355800003	Front Balancing Pole Assy	1
6	335800008	Rubber, Balancing Pole	2
7	307800013	Press Board, Balancing Pole	2
8	901000045	Hex Flange Bolt M8×20	4
9	355800004	Tension Rod, Front Balancing Pole	2
10	901000070	Hex Flange Bolt M10×1.25×45	2
11	901000052	Hex Flange Self-locked Nut M10×1.25	2
12	901000073	Hex Flange Bolt M10×1.25×95	2
13	332800010	Tension Rod Collar, Balancing Pole	2
14	334800010	Rubber Plug,Rocker	4


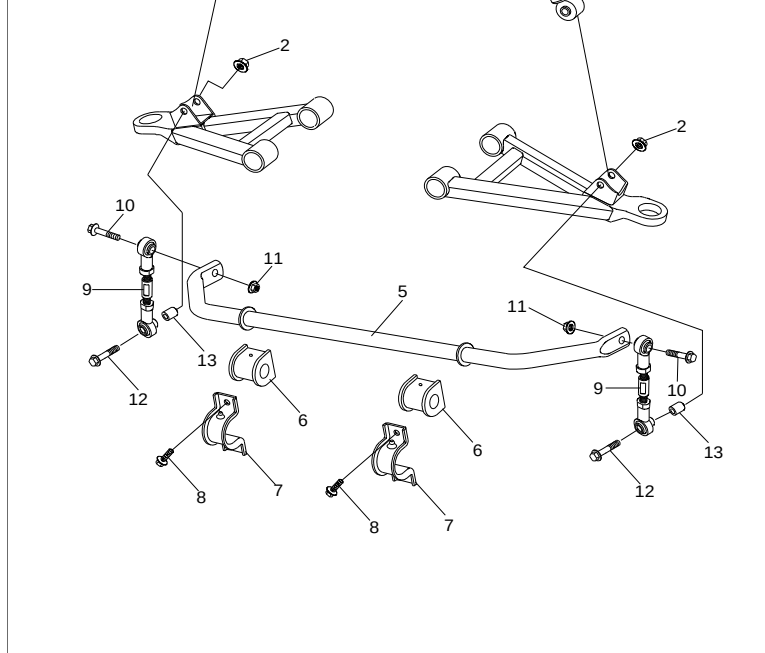


FIG.11

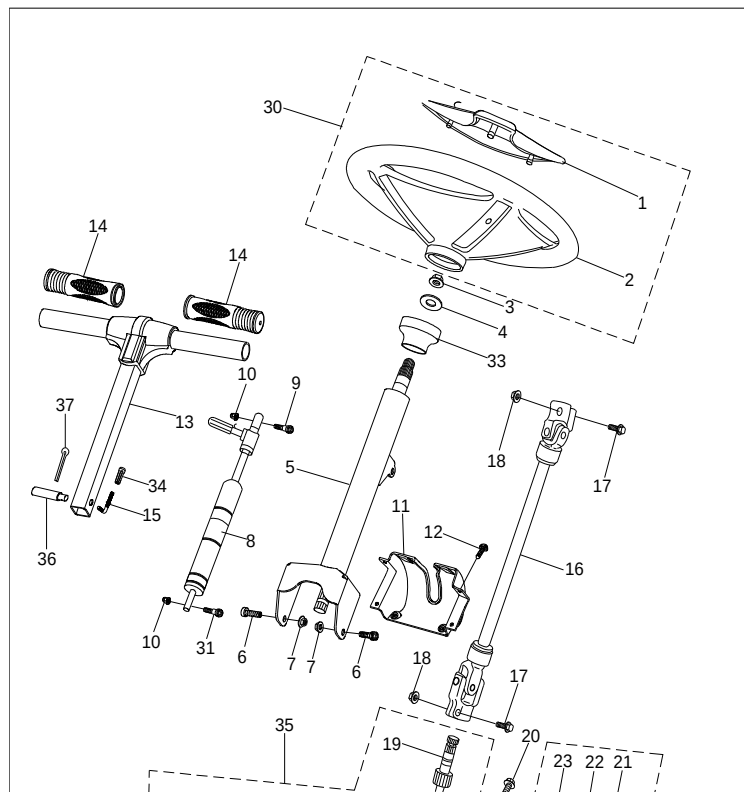

15	334800011	Radiator	2
16	334800012	Dust Cap, Rocker	24
17	334800013	Water Proof, Front Armrest	1
18	340800026	Clamp 14	1
19	340800027	Clamp	1

11、 Steering wheel parts

S/N	Parts Number	Part Name And Standard	Q'ty
1	304800003	Plastic Cover	1
2	356800001	Steering Wheel	1
3	901000068	Six-Angle Flange Self-locked Nut M12×1.25	1
4	341800019	Gasket	1
5	356800002	Steering Column	1
6	901000074	Inner Six-Angle Step BoltM8×13.5-φ12.5×11.5	2
7	901000064	Six-Angle Flange Self-locked Nut M8	2
8	356800003	Spring	1
9	901000075	Inner Six-Angle Step BoltM6×11-φ8×17	1
10	901000076	Nut M6	2
11	303800035	Decoration Board, Steering Machine	1
12	901000060	Screw M6×16	6
13	356800004	Passenger Handle Bar Assy	1


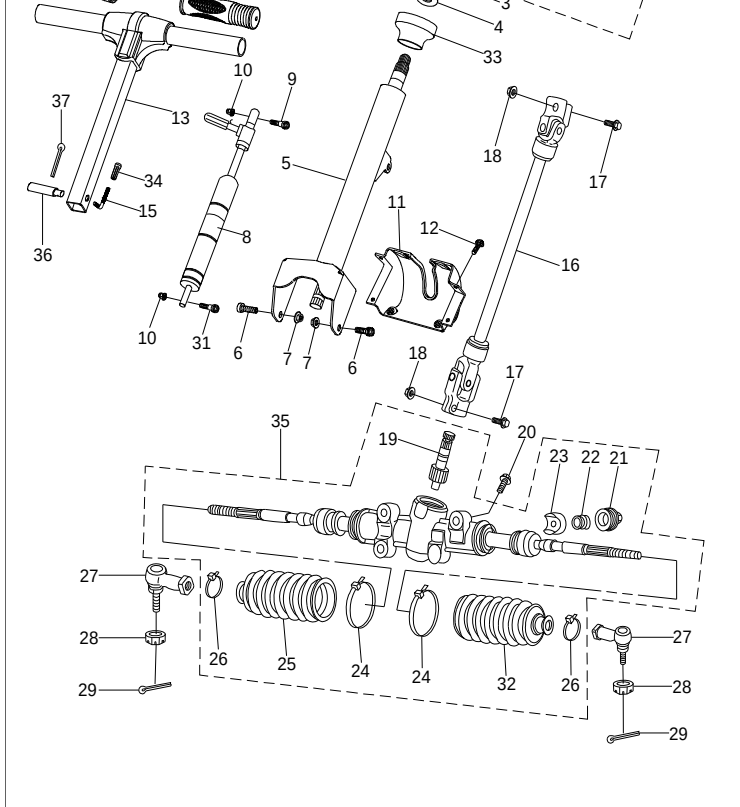



FIG.12

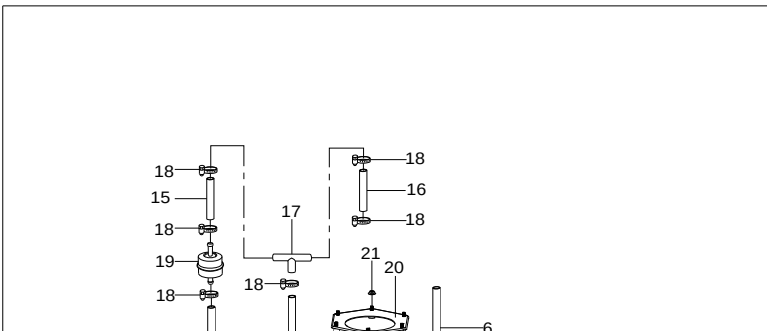

14	335800009	Handle Bar Grip	2
15	356800005	Locking Knob, Handle Bar	1
16	356800006	Steering Transmission Shaft Assy	1
17	901000047	Six-Angle Flange Bolt M8×25	2
18	341800031	Six-Angle Flange Self-locked Nut M8	2
19	314800032	Steering Gear	1
20	901000077	Six-Angle Flange Bolt M10×1.25×30	4
21	302800017	Adjuster Cap	2
22	318800011	Spring	1
23	342800001	Washer	2
24	342800002	Clamp L=300	2
25	335800010	Right Rubber Boot	1
26	342800003	Clamp L=120	2
27	356800007	Tie Rod End,Steering Machine	2
28	901000071	Six-Angle Flange Nut M10×1.25	2
29	343800009	Pin φ3.5×20	2
30	356800008	Steering Wheel Component	1
31	901000078	Inner Six-Angle Step BoltM6×11-φ8×13	1
32	335800019	Left Rubber Boot	1
33	332800012	Nylon Cover, Steering Machine	1
34	335800011	Locking Knob Grip, Handle Bar	1
35	356800010	Steering Machine Parts	1
36	343800014	Dowel Pin	1
37	343800009	Cotter Pin φ3.5×20	1


12、Fuel tank

S/N	Parts Number	Part Name And Standard	Q'ty
1	359800001	Fuel Tank Assy	1

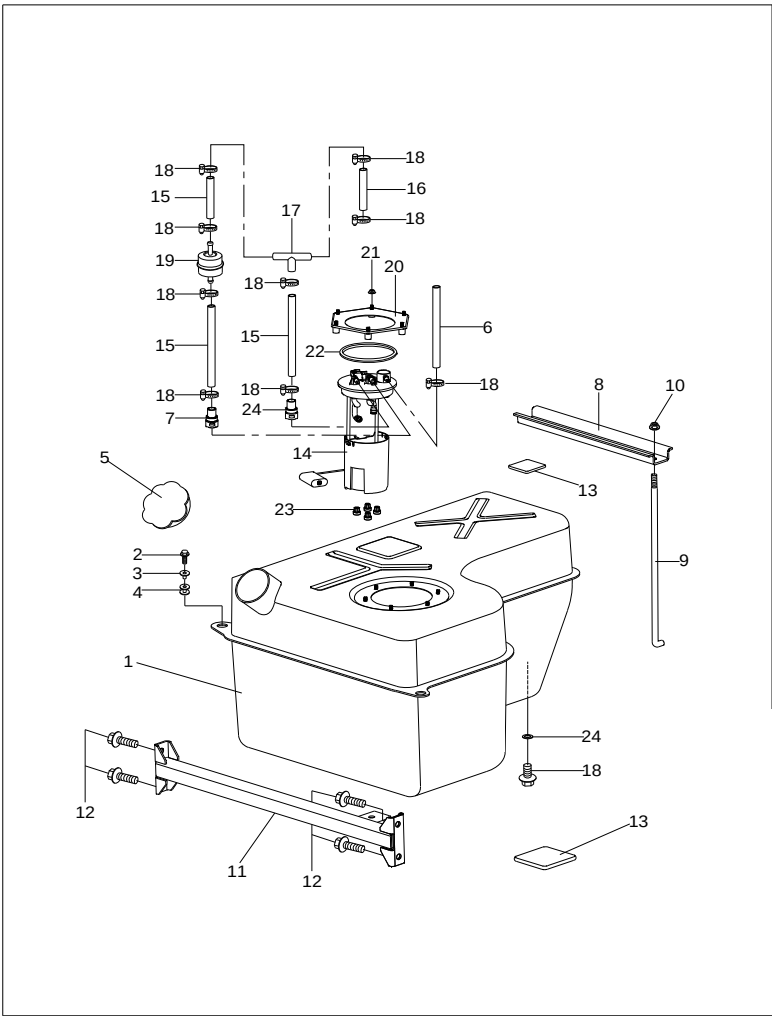

2	901000047	Hex Flange BoltM8×25	3
3	332800013	Flanging Collar φ8.5	3
4	338800023	Robber Grommet	3
5	359800002	Fuel Tank Cover	1
6	339800016	Aeration Pipe φ9×φ5×540,Fuel Tank	1
7	333800003	Connector I	1
8	307800014	Press Board, Fuel Tank	1
9	359800003	Hook, Fuel Tank	1
10	901000064	Hex Flange Self-locked Nut M8	1
11	317800003	Front Bracket,Fuel Tank	1
12	901000084	Hex Flange Bolt M8×45	2
13	359800004	Fuel Tank Rubber Cushion 36×26×5	9
14	358800002	Electronic Fuel Pump	1
15	339800017	Oil Tank Outlet Pipe II (High Pressure)φ8×φ14×250	3
16	339800018	Oil Tank Outlet Pipe I (High Pressure) φ8×φ14×500	1
17	339800019	Tee Joint	1
18	340800009	Screw Clipφ10-φ20	9
19	311800003	Fuel Filter	1
20	307800015	Press Board,Negative Pressure Pump	1
21	901000049	Hex Flange Self-locked Nut M6	6
22	338800024	Oil Seal, Electronic Fuel Pump	1
23	335800012	Rubber, Electronic Fuel Pump	4
24	333800004	Connector II	1
25	384800001	Rubber,Fuel Pipe	1
26	376800026	Patch Cord, Electronic Fuel Pump	1
13、Seat			

FIG.13

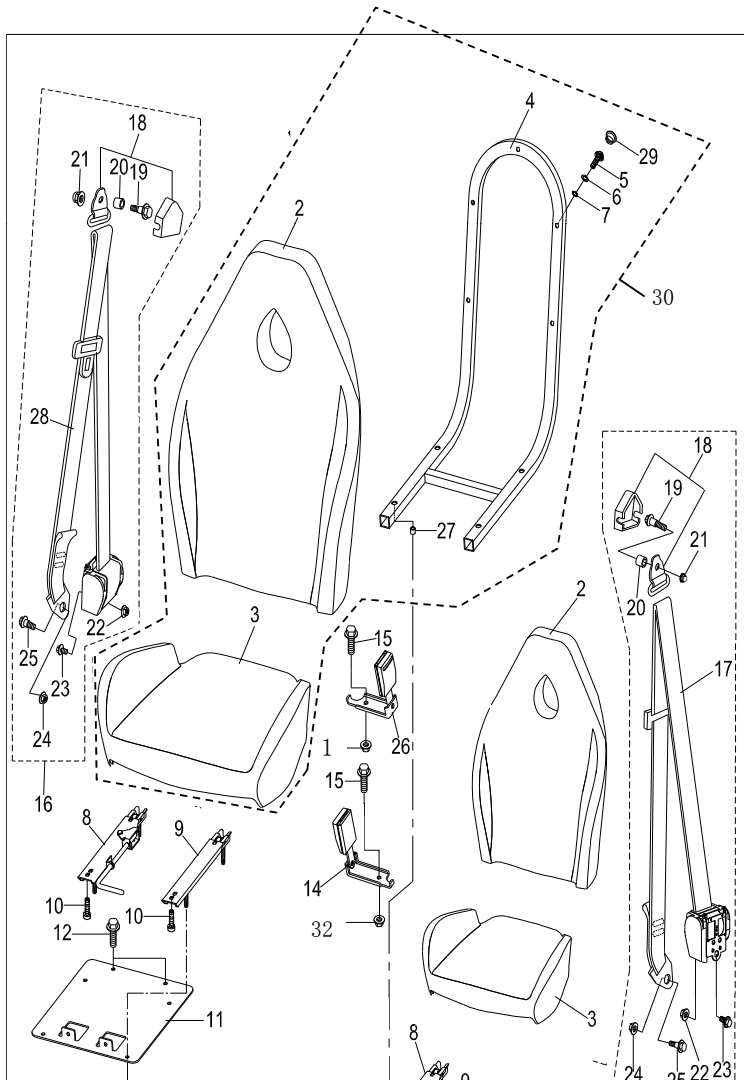

S/N	Parts Number	Part Name And Standard	Q'ty
1	360800001	Flange Nylex Nut M10×1.25	2
2	360800002	Back Rest	2
3	360800003	Seat Cushion	2
4	361800001	Seat Connection Assy	2
5	901000085	Six-Angle Bolt M8×16	10
6	341800032	Washer φ8	10
7	341800031	Circlip φ8	10
8	361800002	Right Slide Rail Assy, Seat	2
9	361800003	Left Slide Rail Assy, Seat	2
10	901000086	Inner Hex Screw M8×25	8
11	303800037	Seat Bottom Mounting Plate	2
12	901000057	Hex Flange Bolt M6×16	4
13	901000049	Hex Flange Self-locked Nut M6	8
14	362800001	Left Lock Catch, Seat Belt	1
15	901000087	Hex Flange Bolt M10×1.25×22	2
16	362800002	Seat Belt Component	2
17	362800003	Left Seat Belt Assy (Tri-Point Fixing Style)	1
18	362800004	Seat Belt Buckle Cover	2
19	901000088	Hex Flange Bolt M10×1.25×25-φ14×5	2
20	332800014	Collar,Seat Belt	2
21	901000089	Nut M10×1.25	2
22	901000052	Hex Flange Self-locked Nut M10×1.25	2
23	901000087	Hex Flange Bolt M10×1.25×22	2
24	901000052	Hex Flange Self-locked Nut M10×1.25	2
25	901000088	Hex Flange Bolt M10×1.25×25-φ14×5	2
26	362800005	Right Lock Catch, Seat Belt	1
27	332800011	Seat Bushing φ8.5×φ13×6.5	8
28	362800006	Right Seat Belt Assy	1


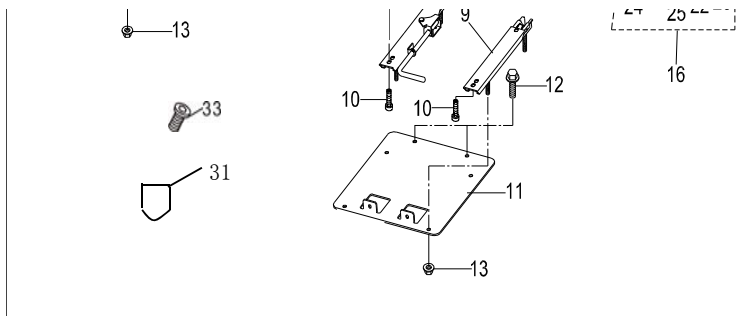


FIG.14

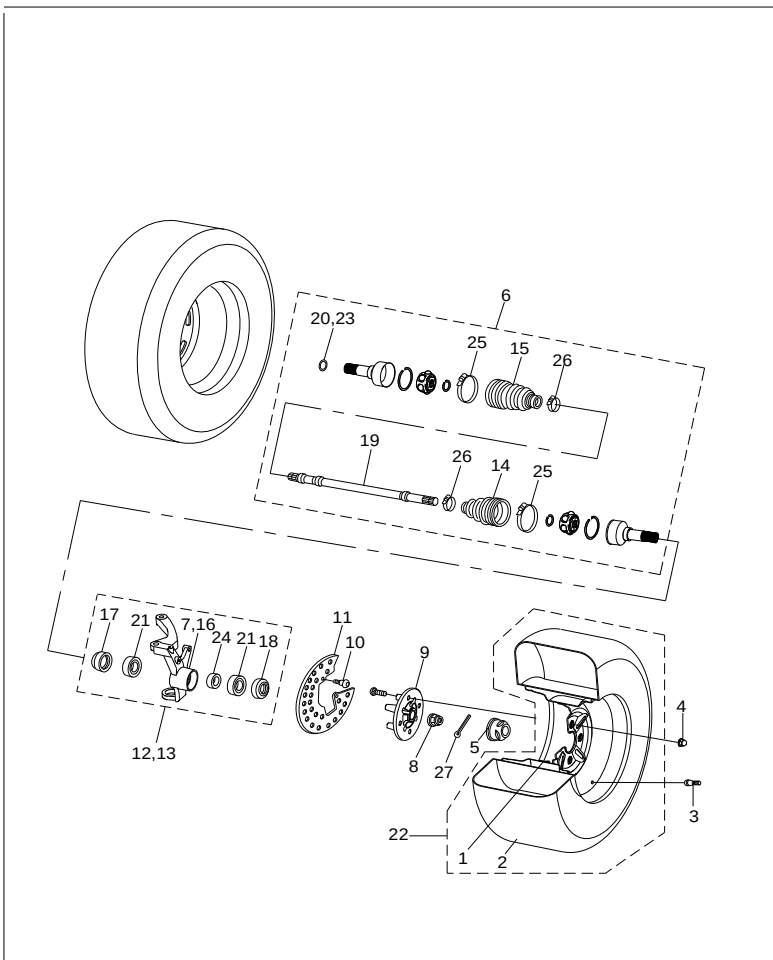

29	334800006	Rubber Plug	10
30	360800004	Seat	2
31	362800007	Position piece, Seat Belt	2
32	901000052	Flange Nylex Nut M10×1.25	2
33	9010000151	Hex Screw M6×30	4

14、AXLE, FRONT WHEEL

S/N	Parts Number	Part Name And Standard	Q'ty
1	363800001	F108 Front Aluminum Wheel II	2
	363800003	F107 Front steel wheel I (12×6.0)	2
2	364800001	Front Tire 25×8-12 (M-mark)	2
3	339800020	Inflating Valve	2
4	901000090	Nut M10×1.25	8
5	304800006	Z104 Axle Decorative Cover IV	2
6	365800006	C.V Axle, Front left bridge	1
	365800007	C.V Axle, Front Right bridge	1
7	367800001	Front Right Steering Knuckle	1
8	901000091	Nut M22×1.5	2
9	366800001	Front Hub Mounting Pad	2
10	901000092	Screw M6×12	4
11	377800003	Protective Cover,Front Brake	2
12	367800003	Front Left Steering Knuckle Assy	1
13	367800004	Front Right Steering Knuckle Assy	1
14	335800013	Inner Rubber Dust-P shed C-1610, Front Bridge	2
15	335800014	Outer Rubber Dust-Pshed C-1605 , Front Bridge	2


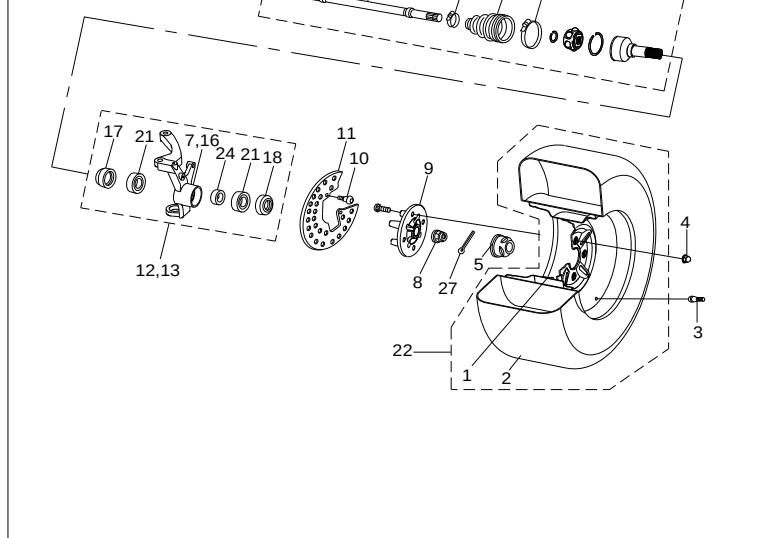


FIG.15

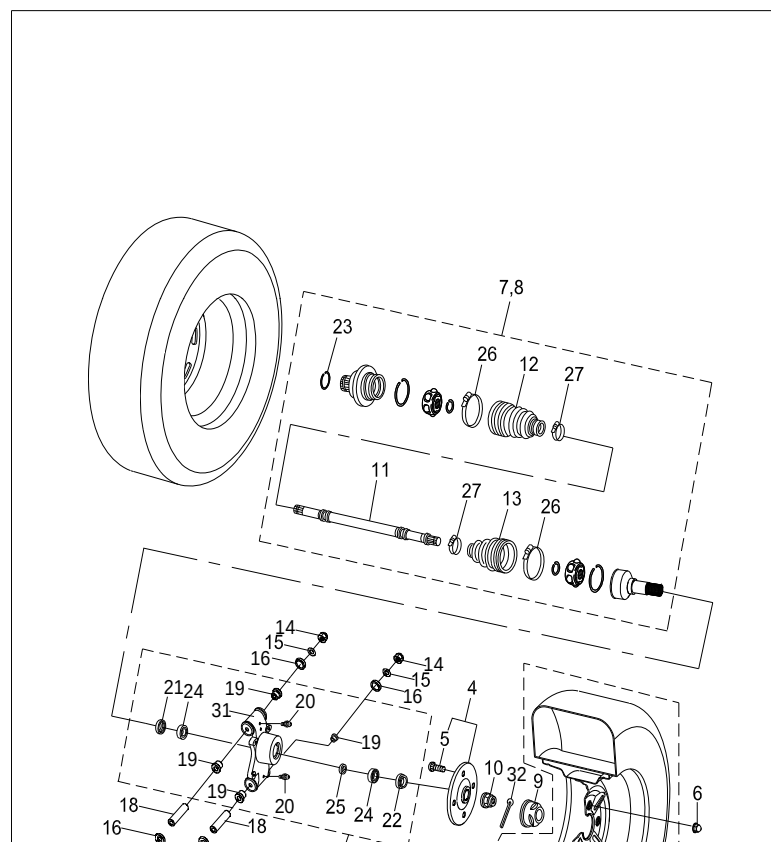

16	367800002	Front Left Steering Knuckle	1
17	330800009	Inner Oil Seal 55×38×7, Front Steering Knuckle	2
18	330800010	Outer Oil Seal 55×38×7, Front Steering Knuckle	2
19	340800011	Outer Dust-Pshed Clamp1	2
20	341800033	Spring Ring, Front-C.V. Axle	1
21	329800016	Bearing 6006C-2RS	4
22	343800009	Pin	2
23	341800033	Spring Ring, Front-C.V. Axle	1
24	332800015	Inner Tube, Front Steering Knuckle	2
25	340800010	Outer Dust-P shed Clamp2	4
26	366800002	Front Wheel Assy	2

15、AXLE, REAR WHEEL

S/N	Parts Number	Part Name And Standard	Q'ty
1	363800002	R108 Rear Aluminum Wheel II	2
2	364800002	Rear Tyre 25×10-12	2
3	339800020	Inflating Valve	2
4	366800004	Rear Hub Mounting Pad	2
5	901000093	Bolt M10×30	4
6	901000090	Nut M10×1.25	8
7	365800003	Left-C.V. Axle, Rear Bridge	1
8	365800004	Right-C.V. Axle, Rear Bridge	1
9	304800027	Z105 Axle Decorative Cover IV	2
10	901000091	Nut M22×1.5	2
11	367800012	Rear left Steering Knuckle Body	1
	367800013	Rear Right Steering Knuckle Body	1
12	335800015	Inner Rubber Boot C-1610 , Rear Bridge	1
13	335800016	Outer Rubber Boot C-1605 , Rear Bridge	1


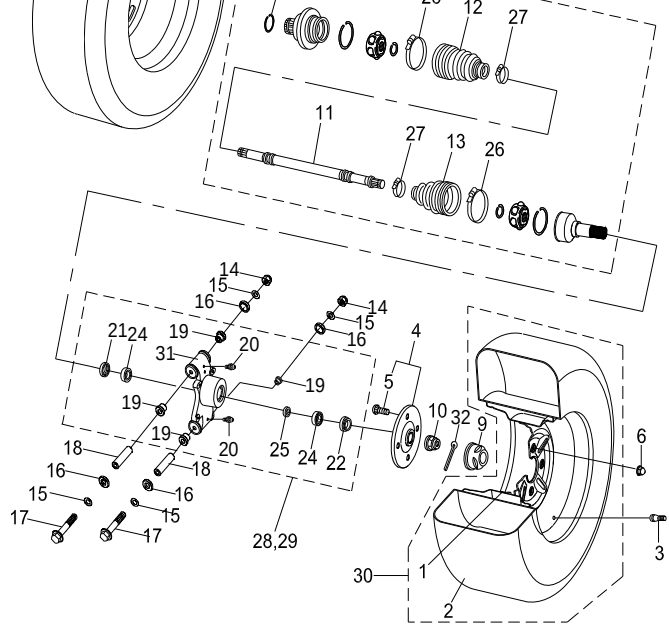



FIG.16

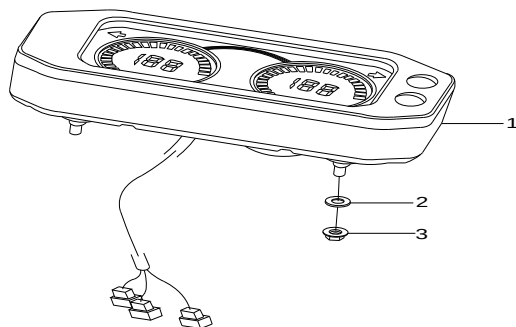

14	901000052	Six-Angle Flange Nut M10×1.25	4
15	341800034	Washer Φ10	8
16	367800005	Rubber Boot, Rear Steering Knuckle	8
17	901000054	Six-Angle Flange Bolt M10×1.25×70	4
18	367800006	Shaft Tube Liner, Rear Steering Knuckle	4
19	367800007	Shaft Tube, Rear Steering Knuckle	8
20	367800008	Curved Nozzle Tip M6	4
21	330800011	Inner Oil Seal , Rear Steering Knuckle	2
22	330800012	Outer Oil Seal, Rear Steering Knuckle	2
23	341800035	Circlip φ30	2
24	329800017	Bearing, Rear Steering Knuckle	4
25	367800009	Inner Tube,Rear Steering Knuckle	2
26	340800017	Outer Dust-P shed Clamp, C.V. Axle	4
27	340800018	Inner Dust-P shed Clamp, C.V. Axle	4
28	367800010	Rear Left Steering Knuckle Assy	1
29	367800011	Rear Right Steering Knuckle Assy	1
30	343800009	Pin	2
31	366800003	Rear Wheel Assy	2

16、Speedometer

S/N	Parts Number	Part Name And Standard	Q'ty
1	357800001	Dash Board	1
2	341800036	Washer φ5	3
3	901000094	Hex Flange Nut M5	3

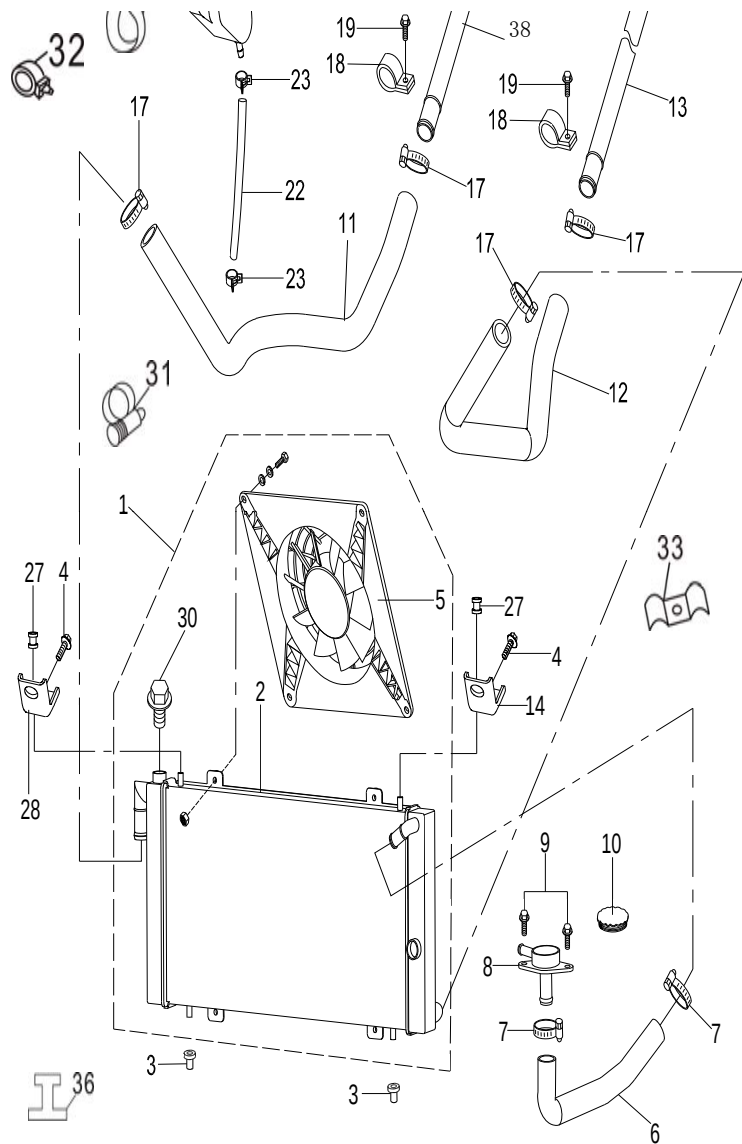


15	339800025	Right Rear Rubber Pipe(Engine Inlet)	1
16	339800026	Left Rear Rubber Pipe(Engine Outlet)	1
17	340800012	Screw Clipφ20-φ30	8
18	340800013	Pipe Clip(Rubber covered) 45×13×φ6.5	4
19	901000096	Hex Flange Bolt M6×12	4
20	369800001	Expansion Water Tank	1
21	901000057	Hex Flange Bolt M6×16	2
22	339800027	Connection Rubber Pipe φ5×φ9×540, Expansion Water Tank	1
23	340800014	Clip Φ9	2
24	369800002	Cover Assy,Expansion Water Tank	1
25	339800028	Overflow Pipe φ5×φ9×140	1
26	340800014	Clip Φ10	1
27	338800026	H-Type Rubber Ring φ10×φ15×φ21×10×1.5	2
28	345800007	Mounting lug- Right Water Cooling Tank	1
29	332800016	Flanging Collar φ6.5×φ9×φ22×7	2
30	901000097	Exhaust Bolt	1
31	340800028	Bolt Clamp φ14-φ27	2
32	340800029	Clip φ14	2
33	340800030	Water Pipe Clip	2
34	340800031	Fuel Pipe Clip,Engine	2
35	340800032	Spring Clip φ14.8	2
36	384800002	H-Type Rubber Ring (5Pcs)	5
37	339800035	Right Rear Rubber Pipe	1
38	339800036	Right Metal Pipe	1

This exploded view diagram illustrates the assembly of a vehicle interior trim component. The main assembly is shown within a dashed rectangular boundary. It includes a rectangular panel (1) with a mesh grille (4) attached to its front. A mounting bracket (14) is positioned behind the panel, secured by screws (2, 3). A series of curved trim pieces (6, 7, 8, 12, 13) are shown being aligned with the panel and bracket. These pieces are connected by a series of pins (9, 10, 11) and fasteners (16). The diagram shows the relative positions and alignment of these components for assembly.


[illegible]

FIG.19

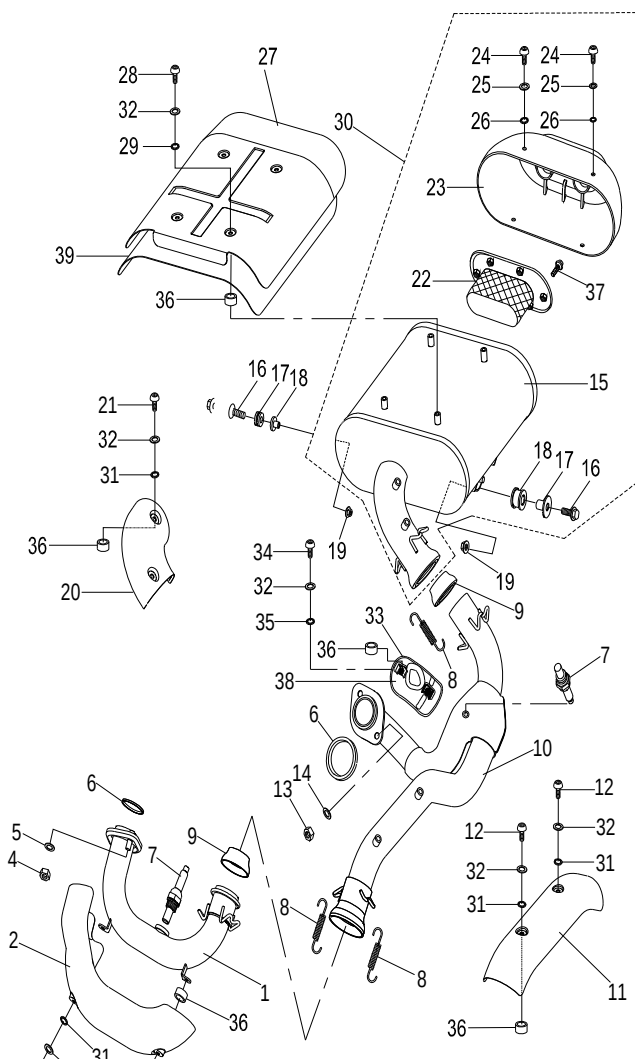


19、Muffler parts

S/N	Parts Number	Part Name And Standard	Q'ty
1	374800001	Exhaust Pipe Assy I	1
2	374800006	Exhaust Pipe I Cover	1
3	901000099	Hex Screw M6×12	2
4	901000100	Hex Nut M8	2
5	341800031	Circlip φ8	2
6	338800028	Exhaust Pipe Gasket	2
7	309800009	O2 Sensor Assy	2
8	318800012	Connecting Spring, Exhaust Pipe	8
9	338800029	Seal Washer, Exhaust Pipe	2
10	374800002	Exhaust Pipe Assy II	1
11	374800007	Exhaust Pipe II Shield	1
12	901000099	Hex Screw M6×12	2
13	901000100	Hex Flange Nut M8	2
14	341800031	Circlip φ8	2
15	374800003	Muffler Main Body	1
16	90100101	Hex Flange Bolt M8×30	2
17	332800018	Flanging Collarφ8×φ12×φ28.5	2
18	338800030	H-type Rubber Ringφ12×φ22×φ26×17,Muffler Mounting Lug	2
19	901000064	Hex Flange Nut M8	2
20	374800008	Air Inlet Pipe Shield, Muffler	1
21	901000099	Hex Screw M6×12	2
22	374800004	Muffler Rear Pipe	1
23	374800009	Muffle Rear Cover	1
24	901000102	Hex Screw M6×16	4

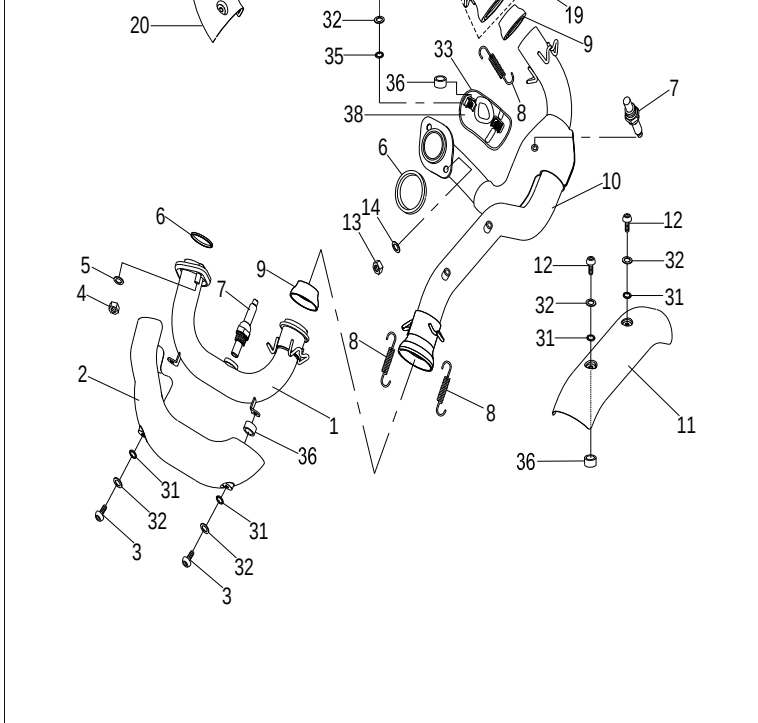


25	341800026	Washer φ6	4
26	341800037	Circlip φ6	4
27	374800010	Muffler Main Body Shield	1
28	901000099	Hex Screw M6×12	2
29	341800037	Circlip φ6	2
30	374800005	Muffler Main Body Assy	1
31	341800037	Circlip	6
32	341800026	Washer φ6	12
33	374800011	Shield 2, Exhaust Pipe II	1
34	901000099	Six-Angle Screw M6×12	2
35	341800037	Circlip	2
36	338800031	Stainless Steel Insulation Cushion	12
37	901000099	Hex Flange Bolt M6×12	6
38	374800012	Insulation Paper, Exhaust Pipe II Shield 2	1
39	374800013	Insulation Paper, Muffler Main Body Shield	1
40	901000152	Hex Bolt M6×30	4

FIG.20

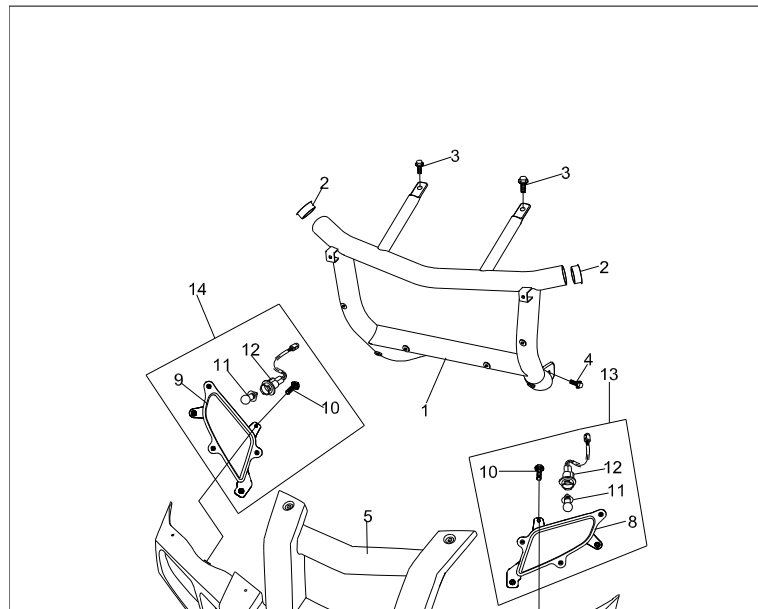


20、Bumper

S/N	Parts Number	Part Name And Standard	Q'ty
1	375800001	Front Bumper Assy	1
2	334800007	Plug I , Front Bumper	2
3	901000056	Hex Flange Bolt M10×1.25×16	2
4	901000106	Hex Flange Bolt M10×1.25×25	2
5	304800015	Upper Decoration Cover, Bumper	1
6	901000060	Screw M6×16	12
7	304800016	Lower Decoration Cover, Bumper	1
8	304800017	Front Left Turning Light cover	1

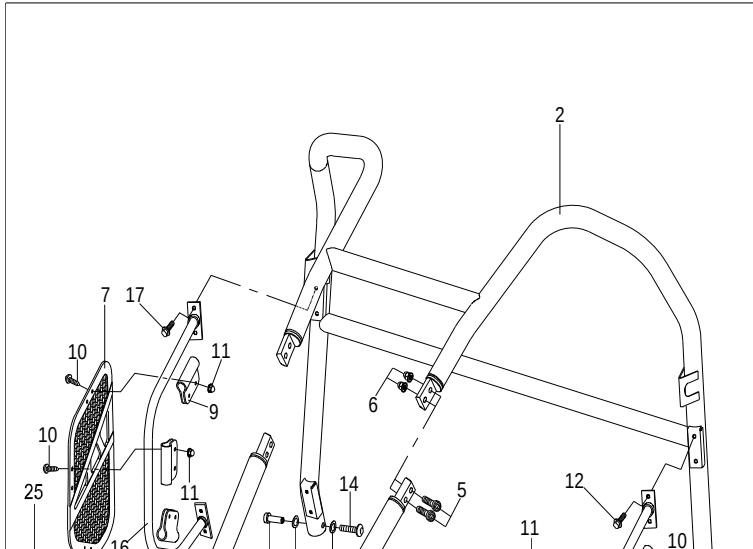[illegible]

S/N	Parts Number	Part Name And Standard	Q'ty
1	375800002	Front Part, Shed Assy	1
2	375800003	Rear Part, Shed Assy	1
3	901000104	Bolt M10×1.25×45	4
4	901000089	Nut M10×1.25	4
5	900000104	Inner Hex BoltM10×1.25×45	4
6	901000089	Nut M10×1.25	4
7	303800038	L/R, Shoulder Protector Panel	2

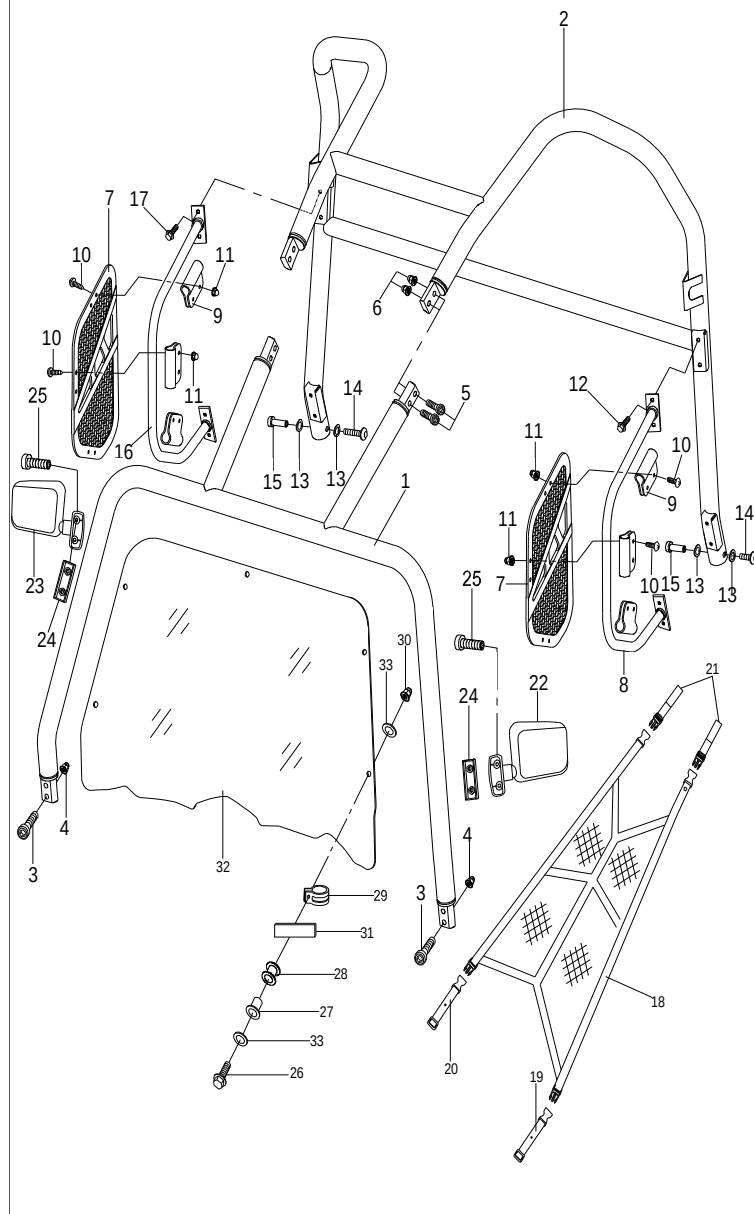

8	375800004	Left Shoulder Protector Assy	1
9	340800016	Clamp, Shoulder Protector	6
10	901000060	Screw M6×16	12
11	901000076	Nut M6	12
12	901000057	Hex Flange Bolt M6×16	4
13	338800032	Washer	4
14	901000105	Inner Hex Screw M8×38-Φ10×16	2
15	901000107	Inner Hex Nut	2
16	375800005	Right Shoulder Protector Assy	1
17	901000057	Hex Flange Bolt M6×16	4
18	336800003	Protecting Wire Net	2
19	336800004	Latch Buckle Assy I, Cab Protection Net	2
20	336800005	Latch Block Assy II, Cab Protection Net	2
21	336800006	Latch Head Assy I, Cab Protection Net	4
22	348800001	Windscreen	1
23	341800026	Washer Φ6	10
24	345800008	Mounting Lug, Protecting Wire Net	2
25	901000153	Hex Flange Bolt M5×20	4
26	901000109	Hex Flange Bolt M5	5
27	332800020	Shed Bushing	5
28	338800033	H-type Rubber Ring φ7×φ14×φ20×18×6	5
29	307800016	Iron Clamp-Windscreen	5
30	901000110	Nut M5	5
31	335800017	Iron clamp rubber	5


This diagram illustrates the exploded view of a door handle assembly, showing two panels (1 and 2) and their associated components. The components are numbered as follows:

- 1**: The main door handle panel, shown in an exploded position below panel 2.
- 2**: The upper door handle panel, shown in an exploded position above panel 1.
- 3**: A small circular component, likely a button or indicator, located on the left side of panel 1.
- 4**: A small circular component, likely a button or indicator, located on the right side of panel 1.
- 5**: A small circular component, likely a button or indicator, located on the left side of panel 2.
- 6**: A cable with a connector, likely for a lock or alarm system, located on the right side of panel 2.
- 7**: A small circular component, likely a button or indicator, located on the right side of panel 1.
- 8**: A small circular component, likely a button or indicator, located on the left side of panel 2.

[illegible][illegible]

23、Carrier			
S/N	Parts Number	Part Name And Standard	Q'ty
1		Rear Cargo Carrier Assy	1

S/N	Parts Number	Part Name And Standard	Q'ty
1		Rear Cargo Carrier Assy	1

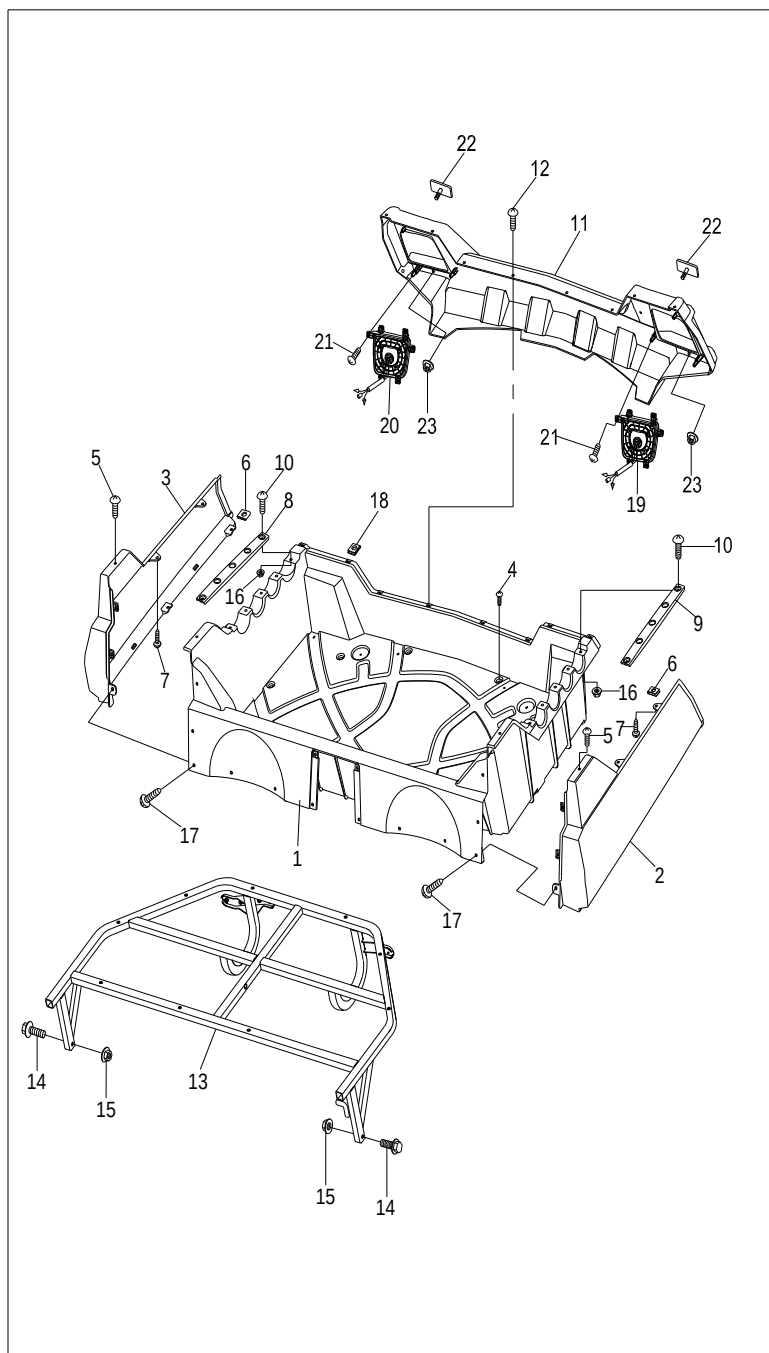

2	303800102	Left Cargo Carrier Decorative Panel (Red)	1
	303800202	Left Cargo Carrier Decorative Panel (Black)	1
	303800302	Left Cargo Carrier Decorative Panel(Dark Green)	1
	303800402	Left Cargo Carrier Decorative Panel (Dark Green Camouflage)	1
	303800502	Left Cargo Carrier Decorative Panel (Maple Leaf Camouflage)	1
	303800602	Left Cargo Carrier Decorative Panel (Silver)	1
	303800702	Left Cargo Carrier Decorative Panel (Vista Camouflage)	1
	303800902	Left Cargo Carrier Decorative Panel (Blue)	1
3	303800101	Right Cargo Carrier Decorative Panel (Red)	1
	303800201	Right Cargo Carrier Decorative Panel (Black)	1
	303800301	Right Cargo Carrier Decorative Panel (Dark Green)	1
	303800401	Right Cargo Carrier Decorative Panel (Dark Green	1
	303800501	Right Cargo Carrier Decorative Panel (Maple Leaf	1
	303800601	Right Cargo Carrier Decorative Panel (Silver)	1
	303800701	Right Cargo Carrier Decorative Panel (Vista Camouflage)	1
	303800901	Right Cargo Carrier Decorative Panel (Blue)	1
4	901000060	Screw M6×16	7
5	901000060	Screw M6×16	2
6	901000063	Nut Clip M6 III (15×23)	10
7	901000061	Tapping Screw ST5.2 × 16	4
8	303800041	Right Cargo Carrier Decorative Strip	1
9	303800042	Left Cargo Carrier Decorative Strip	1
10	901000060	Screw M6×16	10
11	304800021	Taillight Mounting Cover	1
12	901000092	Cross Head Screw M6 × 16	5
13	347800001	Cargo Carrier Frame	1
14	901000084	Hex Flange Bolt M8 × 45	4
15	901000064	Hex Flange Self-locking Nut M8	4
16	901000049	Hex Flange Self-locking Nut M6	5
17	901000060	Cross Head Screw M6 × 16	6


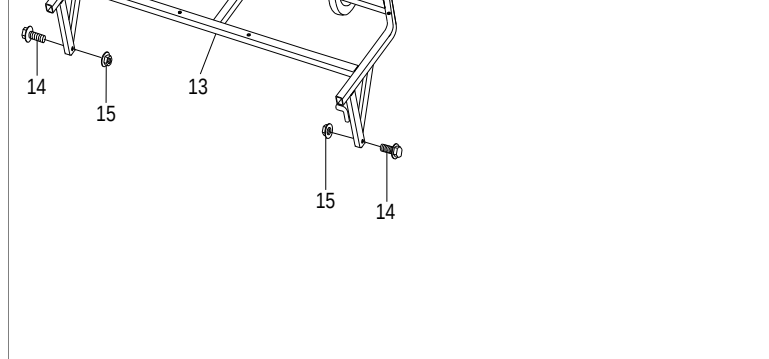


FIG.24

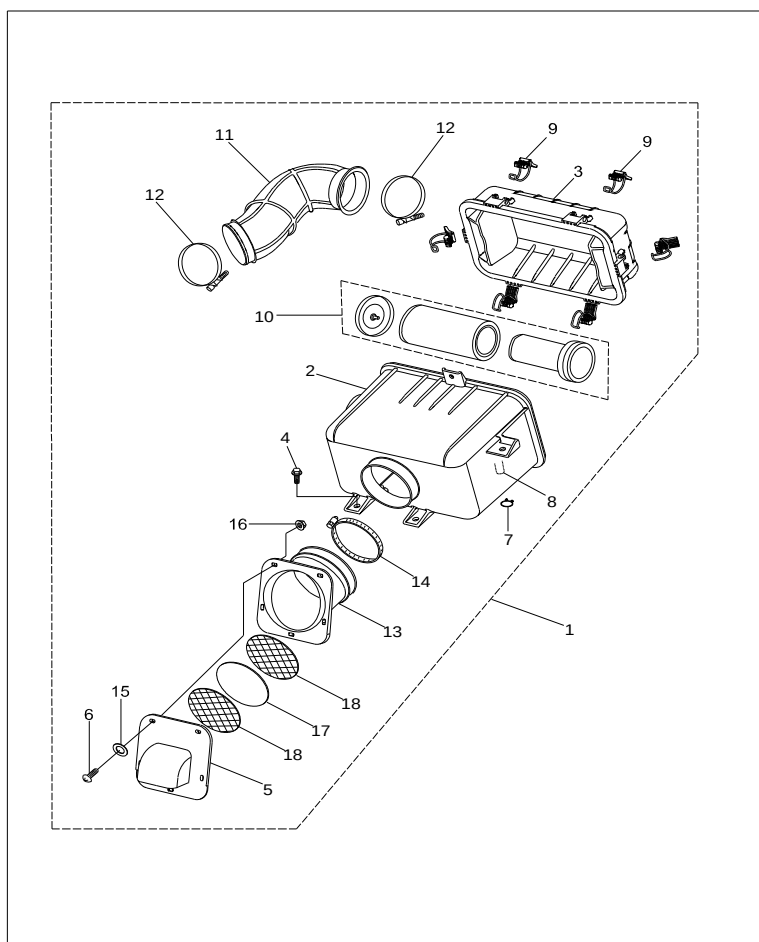

18	901000063	Nut Clip M6 III (15×23)	5
19	370800011	Left Rear Taillight Assy	1
20	370800013	Right Rear Taillight Assy	1
21	901000111	Tapping Screw ST4.2×13	6
22	372800002	Rear Reflector (Square)	2
23	901000049	Hex Flange Self-locked Nut M6	2

24、 Air filter parts

S/N	Parts Number	Part Name And Standard	Q'ty
1	310800001	Air Filter Assy	1
2	310800002	Air Filter Shell	1
3	310800003	Air Filter Cover	1
4	901000044	Hex Flange Bolt M8 × 16	4
5	304800022	Air Intake Cover	1
6	901000112	Screw M4×25	5
7	340800019	Leaking Pipe Cover Clip (Φ 15)	1
8	302800018	Leaking Pipe Cover, Air Filter	1
9	341800038	Spring Clip	6
10	310800004	Air Filter Core	1
11	339800033	Throttle Valve Connecting Pipe	1
12	340800020	Screw Hoop Φ60-Φ80	2
13	339800034	Air Filter Inlet Pipe	1
14	340800020	Clamp φ60-φ80	1
15	341800039	Cushion φ5	5
16	901000113	Hex Flange Nut M4	5
17	310800005	Primary Filter Core	1
18	310800006	Primary Wire Net	1


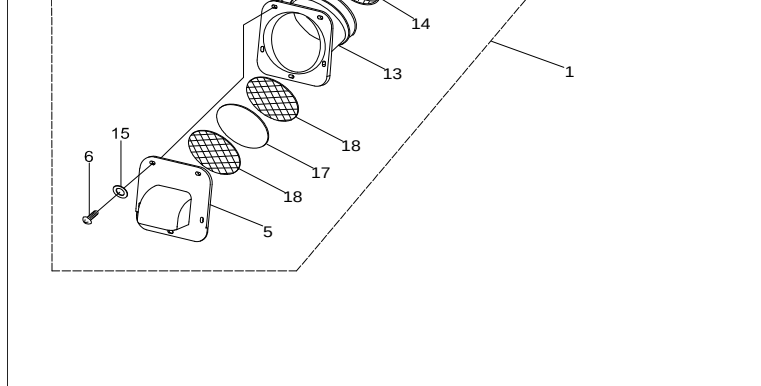


FIG.25

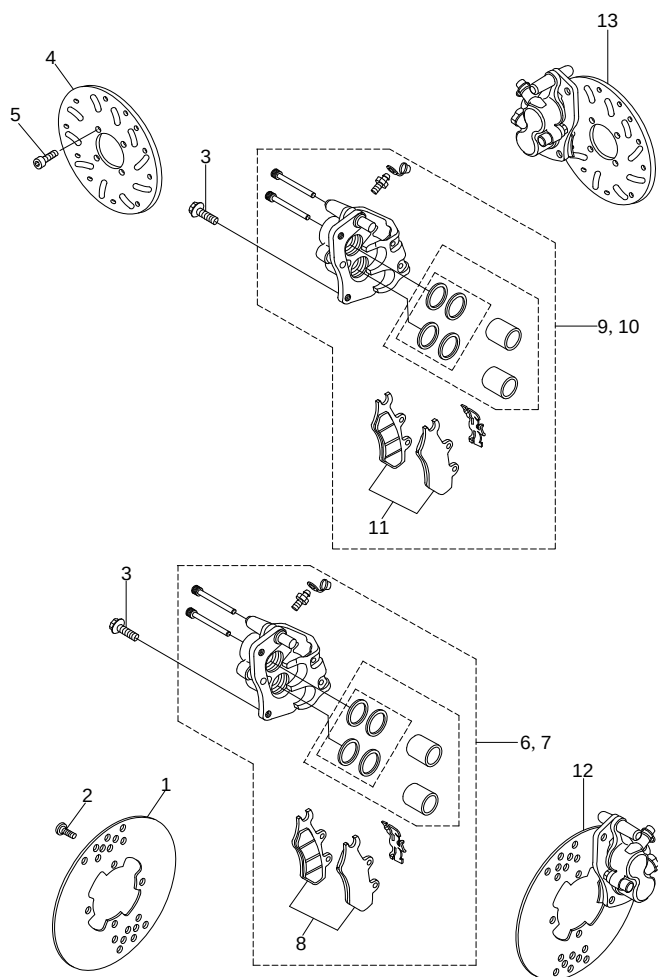

25、 Front disc brake plate			
S/N	Parts Number	Part Name And Standard	Q'ty
1	377800001	Front Disc Brake (Right)	1
2	901000114	Mounting Bolt, Front Disc Brake	8
3	901000087	Flange Bolt M10×22	8
4	377800002	Rear Disc Brake (Right)	1
5	901000115	Mounting Bolt, Rear Disc Brake	8
6	378800004	Front Caliper (Left) Comp.	1
7	378800005	Front Caliper (Right) Comp.	1
8	378800003	Front Disc Brake Shoe	4
9	378800001	Rear Caliper (Left) Comp.	1
10	378800006	Rear Caliper (Right) Comp.	1
11	378800002	Rear Disc Brake Shoe	4
12	378800007	Front Disc Brake (Left)	1
13	378800008	Rear Disc Brake (Left)	1
14	9010000154	Screw M10×1.25×20	8

Page 31



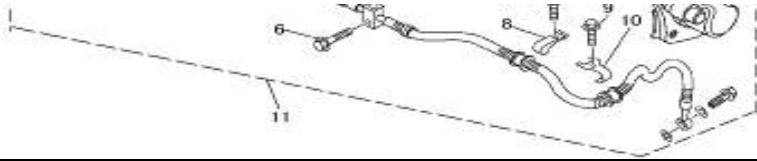


FIG.27

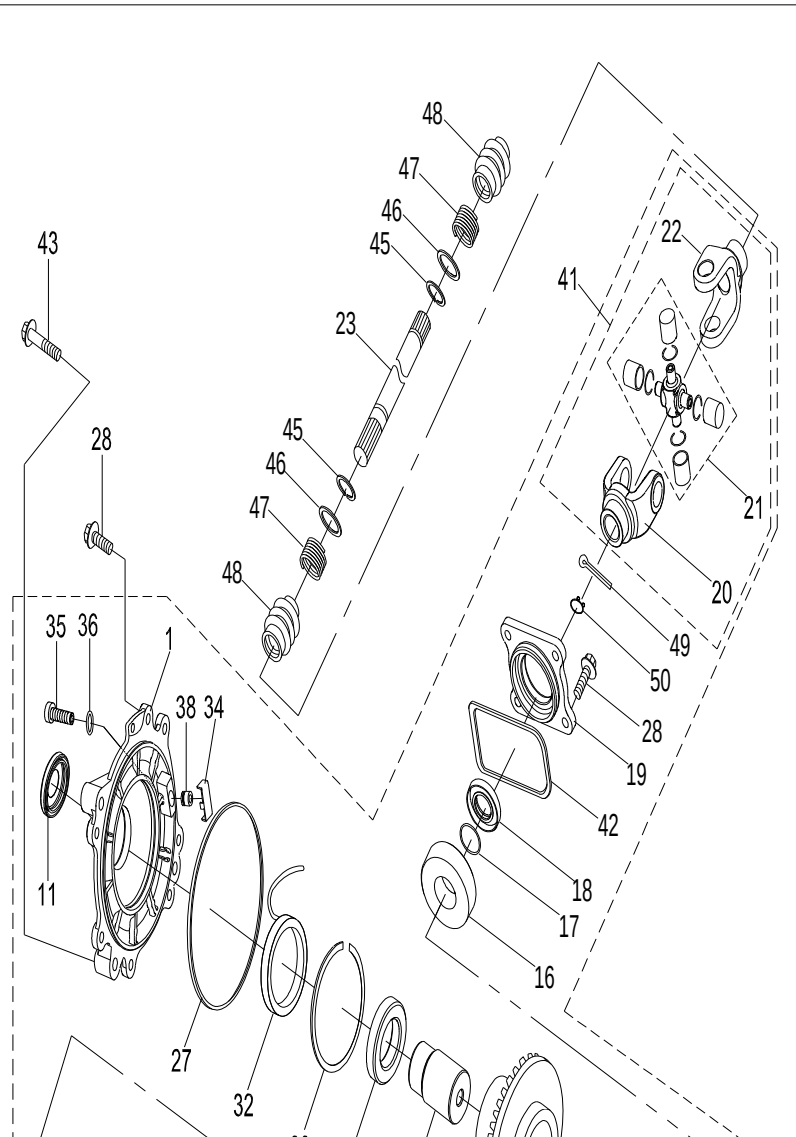


27、Front axle reducer assy

S/N	Parts Number	Part Name And Standard	Q'ty
1	380800001	Front Bridge Case Cover	1
2	380800002	Front Bridge Case	1
3	380800003	Front Bridge Driven Gear	1
4	380800004	Positioning Sleeve	1
5	380800005	Right-C.V. Axle	1
6	380800006	Roller	14
7	317800005	Cage Combination	1
8	380800008	Elastic Clip	14
9	380800009	Left-C.V. Axle	1
10	329800018	Bearings 6008C3	2
11	330800013	Universal Joint Seal,Front Bridge	2
12	380800010	Drive Gear Sleeve	1
13	380800011	Front Bridge Drive Gear	1
14	380800012	Positioning Shaft	1
15	329800023	Bearing Hk	1
16	329800019	Bearing 6306C3	1
17	380800014	Adjusting Gasket	1
18	330800014	Oil Seal 25×47×8	1
19	380800015	Cap Seal, Front Bridge	1
20	315800007	Connecting Fork, 1	1
21	315800009	Joint Cross Shaft	1
22	315800008	Connecting Fork 2	1

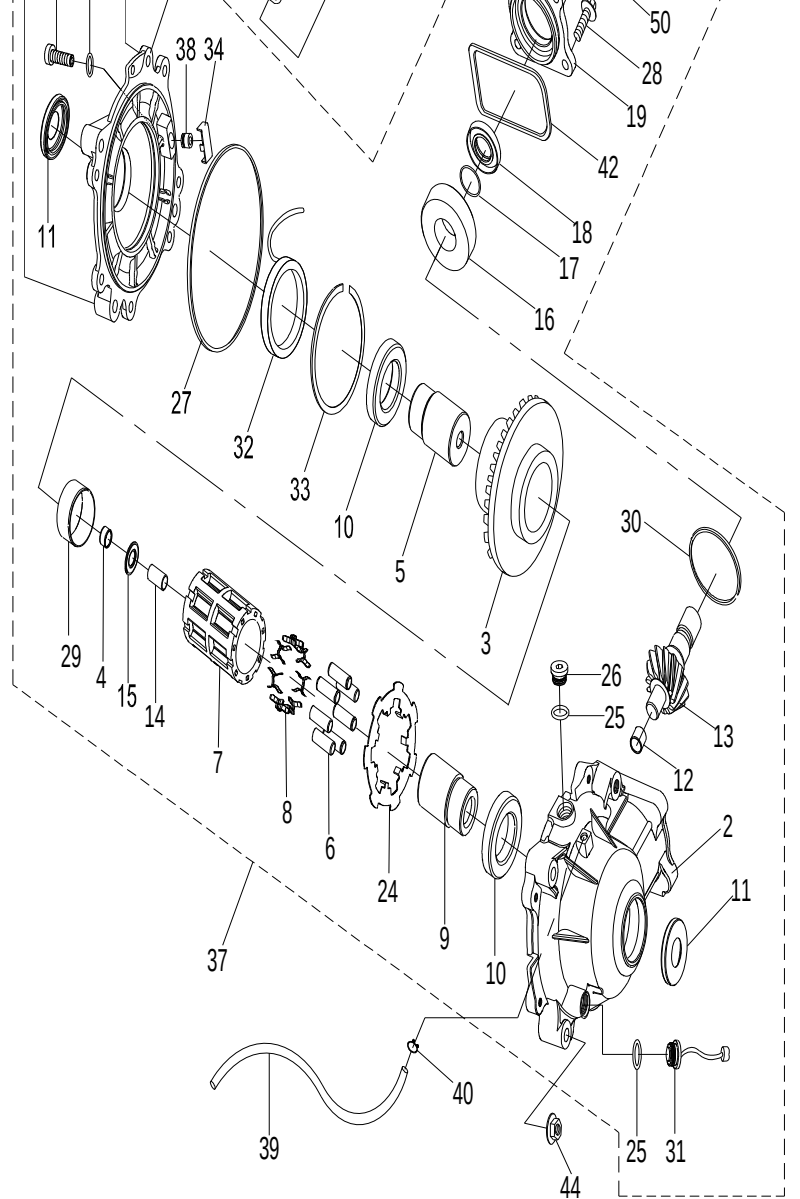


23	308800012	Transmission Shaft, Front Bridge	1
24	307800017	Fixed Plate,Cage Combination	1
25	338800034	O-Ring, Oil Inlet (Outlet) Bolt	2
26	901000117	Oil Outlet Bolt, Front Bridge	1
27	338800035	Rectangular Ring, Front Bridge Box	1
28	901000118	Self-Locked Bolt M8×25	11
29	380800017	Drive Gear Bush	1
30	342800004	Gascket	1
31	309800010	Speed Sensor Assy	1
32	309800011	Induction Coil Assy	1
33	341800040	Circlip 106.5×1.2	1
34	342800006	Adjusting Gasket	1
35	901000119	Screw M5×18	1
36	338800036	O-ring	1
37	380800018	Front Bridge Differential Assy	1
38	380800019	Adjusting Column	1
39	339800036	Air Tube,Front Bridge	1
40	340800023	Spring Clip	1
41	315800010	Universal Joint	1
42	338800037	Rubber Rectangular Ring, Cap Seal	1
43	901000120	Hex Flange Bolt M10×1.25×80	2
44	901000052	Hex Flange Self-Locked Bolt M10×1.25	2
45	341800041	Circlip d=17.5×δ=1	2
46	341800042	Cushion Piece 20x26x1	2
47	318800013	Spring ,Front Driving Shaft	2
48	335800018	Dust Proof, Front Driving Shaft	2
49	343800009	Dowel Pin	1
50	340800024	Clip	1

FIG.28

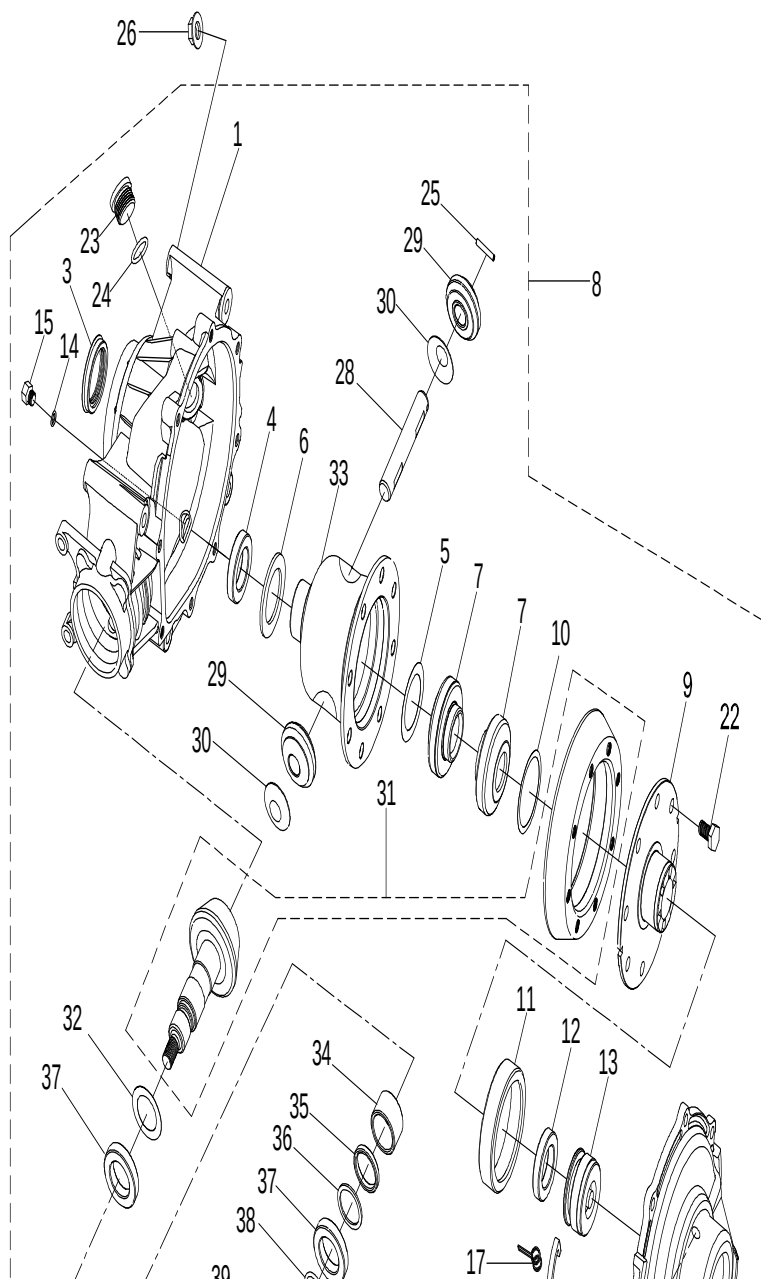


28、Rear axle reducer assy

S/N	Parts Number	Part Name And Standard	Q'ty
1	381800001	Rear Bridge Reducer Case	1
2	381800002	Rear Bridge Reducer Case Cover	1
3	330800015	Oil Seal 52×35×7, Universal Joint	2
4	329800020	Bearing 32008E	1
5	342800007	Adjusting Gasket 0.1	1
6	342800008	Adjusting Gasket 0.15	1
	342800009	Adjusting Gasket 0.2	1
7	314800033	Driven Gear	2
8	381800003	Rear Bridge Reducer Assy	1
9	337800001	Terminal Pad, Driven Gear	1
10	342800010	Gasket 0.1, Terminal Pad	1
	342800011	Gasket 0.2, Terminal Pad	1
11	329800021	Bearing 32010E	1
12	331800006	Bearing Housing	1
13	314800034	Clutch Claw	1
14	338800038	Fuel Outlet Gasket	1
15	901000121	Oil Outlet BoltM10×1	1
16	337800002	Fork Fabrication	1
17	341800043	Clip φ1.9	1
18	317800004	Support Bracket	1
19	318800014	Return Spring	1
20	308800013	Fork Bush	1
21	343800017	Fork Column Pin	1
22	901000122	Differential Bolt M10×1.25×20	8
23	901000123	Oil Inlet Bolt, Rear Bridge	1
24	338800039	O-Ring, Rear Bridge Oil Inlet Hole	1

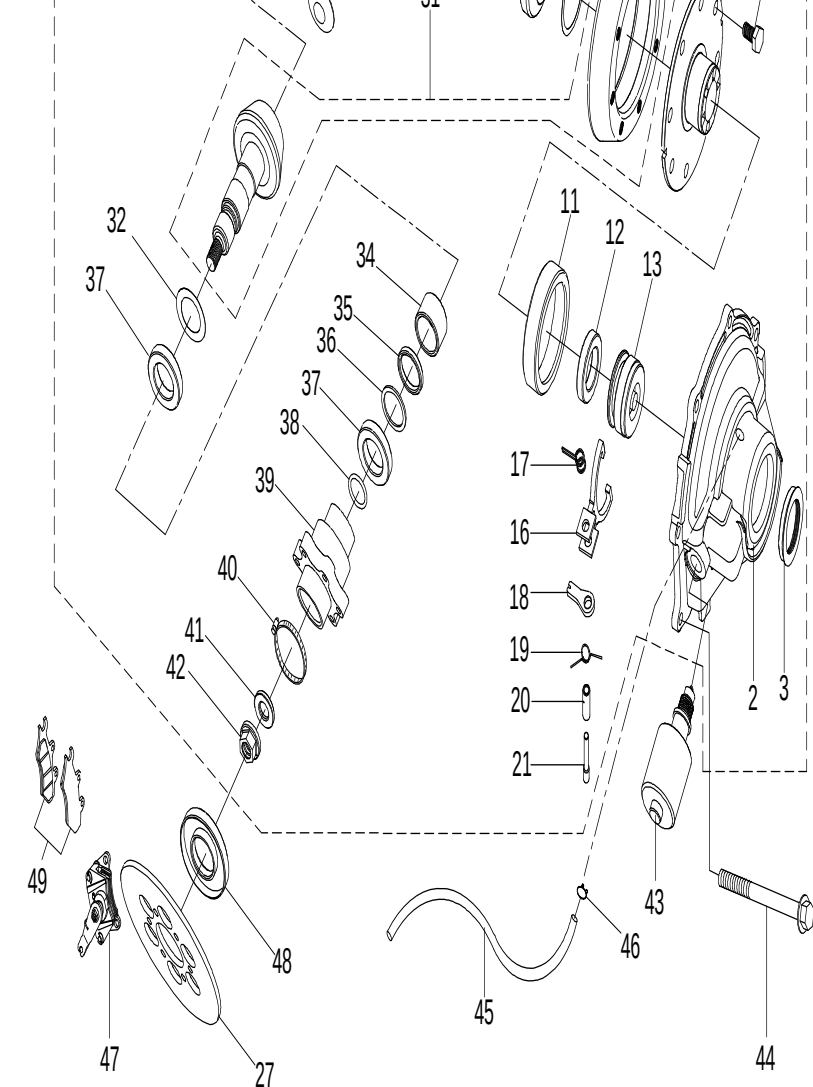

25	343800018	Column Pin $\Phi 4 \times 28$	1
26	901000052	Hex Flange Bolt M10 $\times$ 1.25	2
27	337800003	Mechanical Brake Disc	1
28	343800019	Column Pin	1
29	314800035	Planetary gear	2
30	342800012	Adjusting Gasket	2
31	314800036	Driving & Driven Gears Assy	1
32	342800013	Gasket, Rear Bridge Driving Gears	1
33	381800004	Differential Cover, Rear Bridge	1
34	381800005	Inner Tube $\phi 38 \times \phi 30.2 \times 15.3$	1
35	342800014	Adjusting Inner Tube Gasket	1
36	381800006	Adjusting Inner Tube	1
37	329800022	Bearing 32206E	2
38	338800040	O-Ring $\Phi 24 \times \Phi 3$	1
39	377800004	Mounting Pad, Rear Disc Brake	1
40	340800025	Clamp $\Phi 40-60$	1
41	341800045	Gasket 14 $\times$ 30 $\times$ 4	1
42	901000124	Self-locked Bolt M14 $\times$ 1.5	1
43	358800003	Solenoid Valve Assy (With Plug)	1
44	901000125	Hex Flange Bolt M10 $\times$ 1.25 $\times$ 80	2
45	339800037	Air Tube, Rear Bridge	1
46	340800023	Spring Clip	1
47	337800004	Parking Brake Calipers	1
48	381800007	Rubber Boot, Rear Bridge	1
49	378800009	Parking Brake Shoe	1
50	332800021	Mounting Collar, Rear Bridge	2
29、Position, electrical parts			

FIG.29

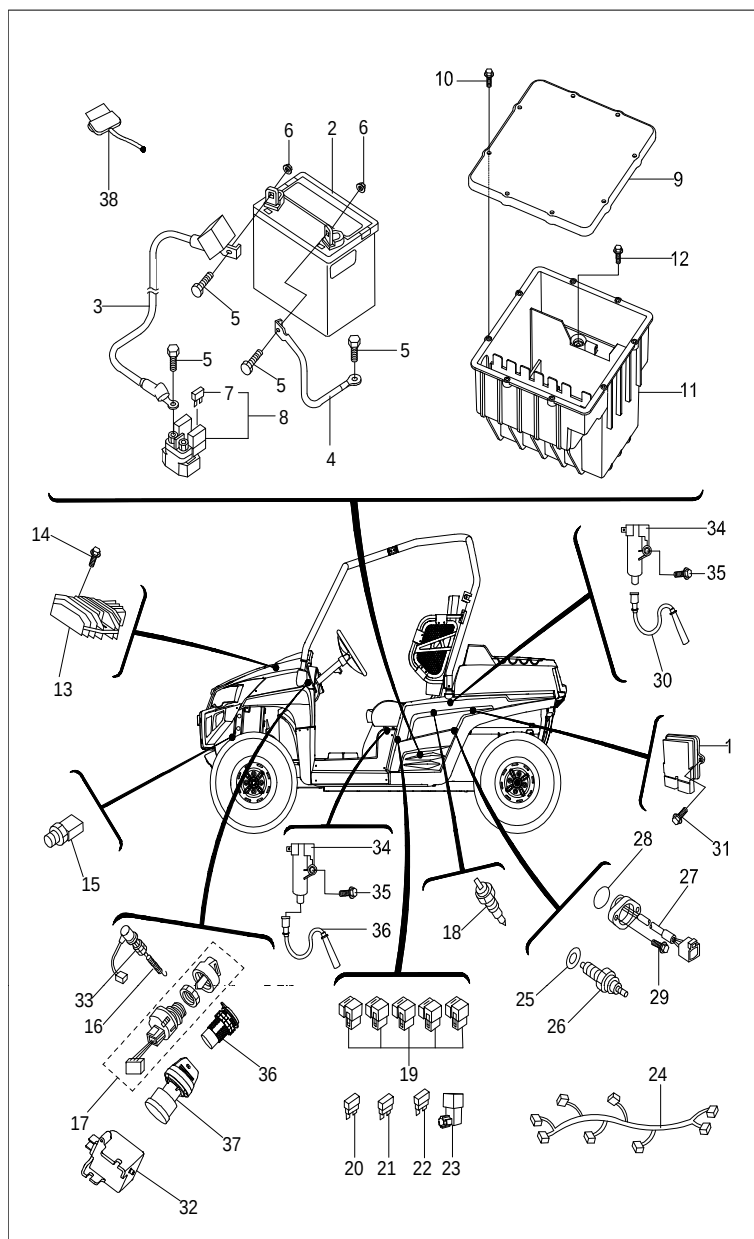

S/N	Parts Number	Part Name And Standard	Q'ty
1	376800005	EFI	1
2	376800006	Battery	1
3	376800007	Positive Cable, Battery	1
4	376800008	Negative Cable, Battery	1
5	901000126	Bolt M6×20	4
6	901000127	Six-Angle Flange Nut M6	2
7	376800009	Fuse (30A-BI)	2
8	376800010	Starting Relay	1
9	304800023	Battery Box Cover	1
10	901000096	Six-Angle Flange Bolt M10×1.25×80	8
11	304800024	Battery Box	1
12	901000057	Six-Angle Flange Bolt M10×1.25×80	6
13	376800011	Voltage Regulator	1
14	901000048	Six-Angle Flange Bolt M10×1.25×80	2
15	376800012	Thermostat Parts	1
16	318800015	Return Spring , Rear Brake	1
17	376800002	Ignition Switch Assy	1
18	309800012	Temperature Sensor	1
19	376800013	Auxiliary Relay(G8Hn-1C4T-Rj)	5
20	376800015	Fuse(10A)	4
21	376800016	Fuse(5A)	1
22	376800017	Fuse(15A)	1
23	376800014	Breaker Assy(G8Ms-1A41T)	1
24	376800018	Wire Harness(EPA)	1
25	341800044	Washer Φ10	1
26	309800004	Reverse Switch	1
27	309800003	Gearshift Switch Assy	1
28	338800015	O Ring Φ29.6×2.4	1


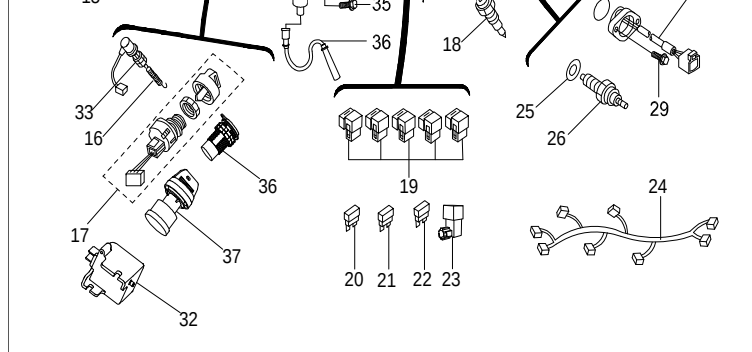


FIG.30

29	901000057	Six-Angle Flange Bolt M6×16	1
30	376800019	High Voltage Wire	2
31	901000057	Six-Angle Flange Bolt M6×16	2
32	376800020	2WD/ 4WD Switch	1
33	376800021	Rear Brake Light Switch Assy	1
34	376800022	Ignition Coil	2
35	901000128	Six-Angle Flange Bolt M6×40	2
36	376800023	DC Socket	1
37	376800031	Auxiliary Relay Bracket	1
38	376800032	Cut-off Relay Assy Rubber	1
39	376800033	Rubber Cushion, Battery	2
40	376800034	Battery Clamp	1
41	376800035	Speed Sensor Wire	1
42	376800036	Connector, Sensor	1
43	376800037	Corrugated Tube (Small)	1
44	376800038	Parking Indicator Switch	1
45	376800039	Auxiliary Relay Rubber	1
46	376800042	Cut-off Relay Assy Rubber	1
47	338800041	Gasket, Sensor	1
48	901000155	Bolt M4*12	1
49	901000156	Bolt M4*20	1
50	358800004	Solenoid Valve Controller	1
51	376800040	Secondary Wire Harness(E-mark)	1
52	376800041	Corrugated Tube (Big)	1
53	376800024	Headlight Switch Assy	1
30、Sticker position			
S/N	Parts Number	Part Name And Standard	Q'ty

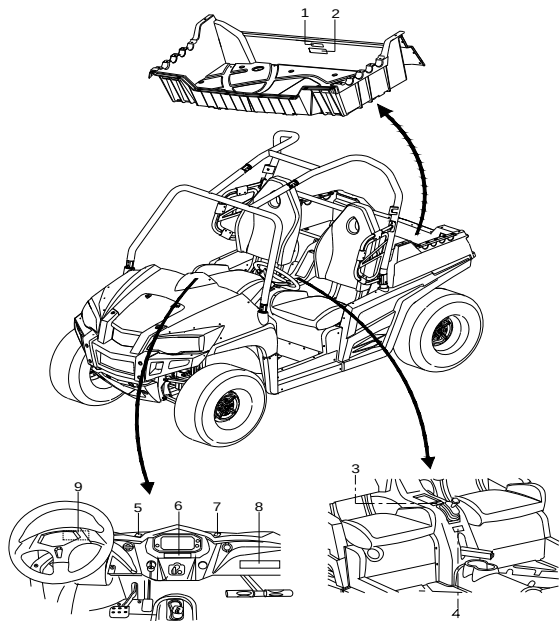

1	382800001	Warning Label 1 (Passenger Prohibited On Cargo Carrier)	1
2	382800002	Warning Label 2 (Tire Pressure)	1
	382800002	Warning Label 2 (Tire Pressure)E-mark	1
3	382800003	Warning Label 3 (Passenger Safety Instruction)	1
4	382800004	Warning Label 4 (Gearshift Instruction)	1
5	382800005	Warning Label 5 (Age Warning)	1
6	382800006	Warning Label 6 (Operation Warning)	1
	382800006	Warning Label 6 (Operation Warning)	1
7	382800007	Warning Label 7 (Safety Warning)	1
8	382800008	Warning Label 8 (Operation Instruction)	1
	382800008	Warning Label 8 (Operation Instruction)E-mark	1
9	382800009	Warning Label 9(Speed Limitation Warning)	1
10	350800003	Tool Box	1